


BS892  
ASSEMBLY INSTRUCTIONS




A		1
B		1
C		1
D		1
E		4
F		4
G		1


STEP 1

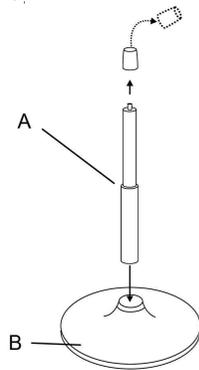

STEP 2

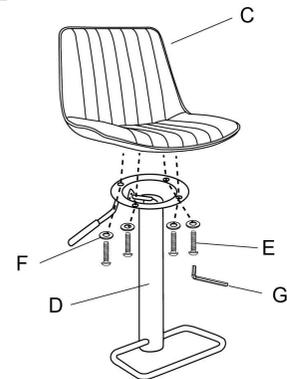

STEP 3

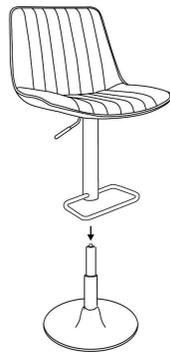

STEP 4

