




Willis Kitchen/Bar Stool

BS946-26/30


PRODUCT PARTS INCLUDED

A

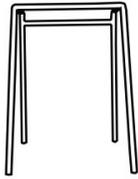


X1

B

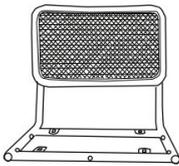


X1

C




X1

D



X1


E



M6*30

X9

F



M6*16


X4

G




X1

STEP 1

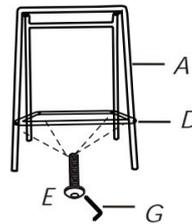


Assemble the footrest to the frame with D&E

STEP 2

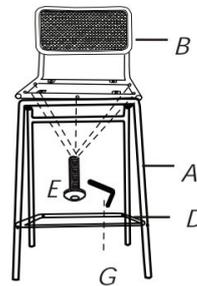

Assemble the back to the frame with B&E

STEP 3

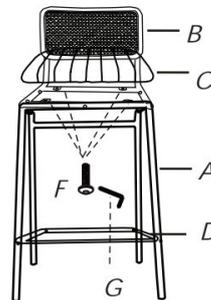

Assemble the seat on the back with C&F

STEP 4



Assembled

ATTENTIONS:

1. Follow Assemble Steps One By One
2. Wipe With Soft Cloth