





Bronte Storage Bed

BED-BRONT-RVEL

PRODUCT PARTS INCLUDED

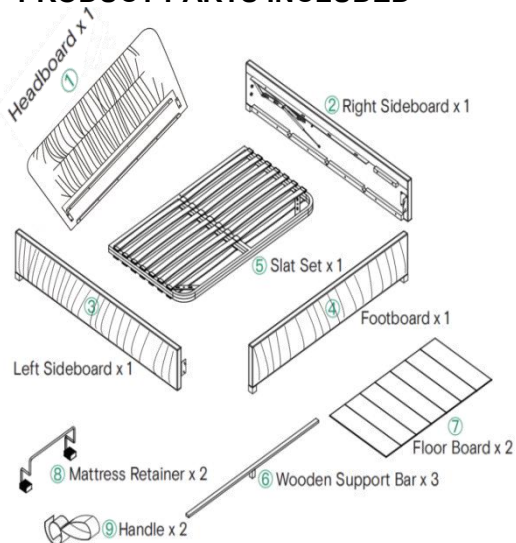


Hardware

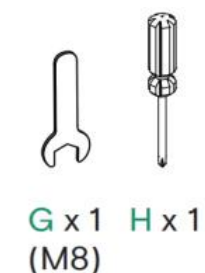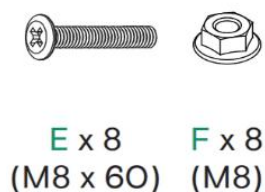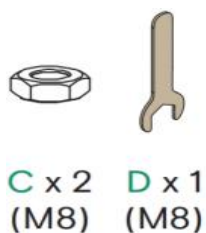

Step 1


Loosen the pre-attached bolts on both sideboards ① and the footboard ④ using the Allen key **D** but do not remove them.

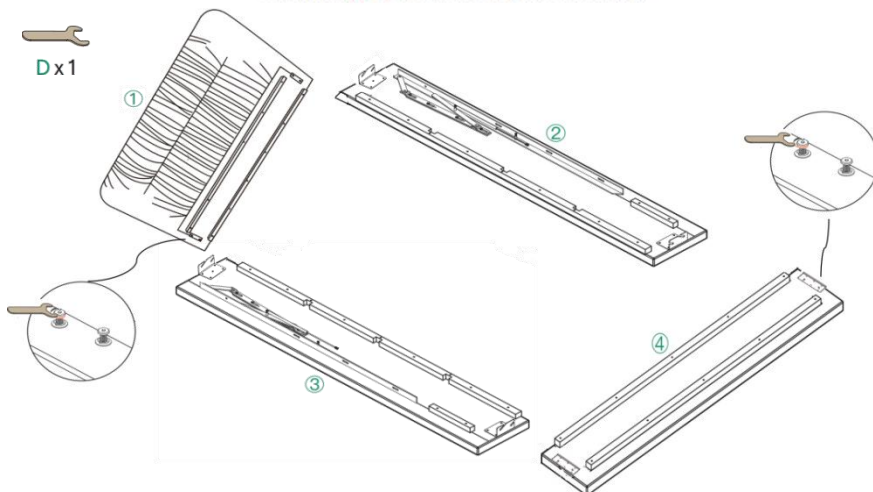

Step 2

Hook the brackets to the bolts. Screw the bolts with the Allen key **D** but **do not tighten them yet**.


Adjust and make sure the frame formed in **Step 2** is aligned perfectly and then tighten all bolts with the Allen key **D**.

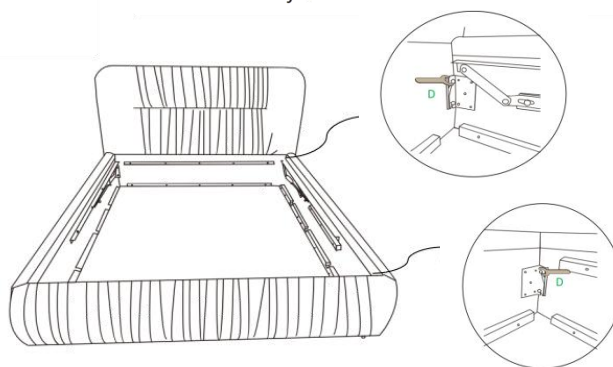

Step 3

Unscrew and remove the nut from the threaded rod of the gas lift arm. Keep the removed nut for the following assembly. Repeat this for the other side.


Lift the gas lift arm and the gas lift strut so that the threaded rod of the arm can fit into the hole of the strut.

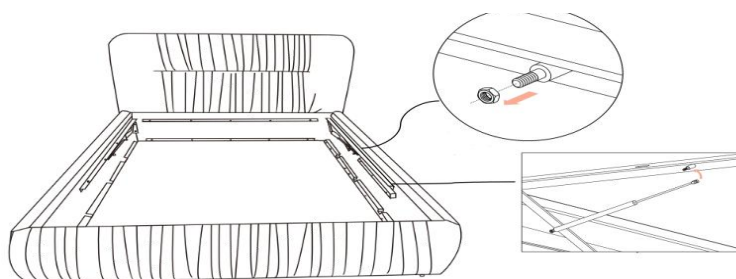

Bronte Storage Bed


BED-BRONT-RVEL

Step 4




Secure the structure formed in **Step 3** using the nut removed in **Step 3** with the spanner **G**. Repeat the process for the other side.

Fit the wooden support bars **6** into the slots.

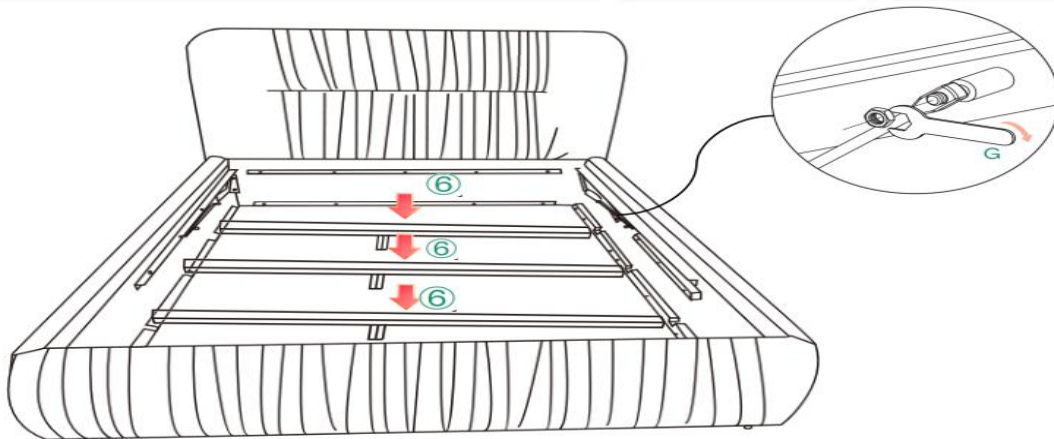

Step 5

Place the floor boards **7** on top of the wooden support bars.

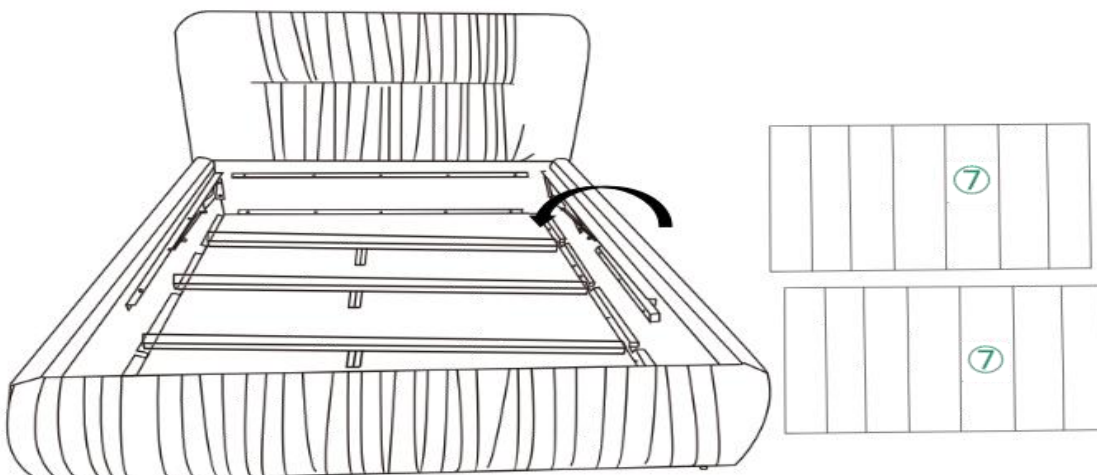

Bronte Storage Bed

BED-BRONT-RVEL





Step 6

Unfold the slat set ⑤ to make a full-size slat set.

Place the slat set on a level protected surface, making sure the underside is facing you.

Fit a flat washer B to a long bolt A. Insert the bolt from one side of the middle bars, making sure it protrudes from the other side.




Fit a flat washer B and a nut C to the bolt from the other side. Tighten the nut with the spanner D.

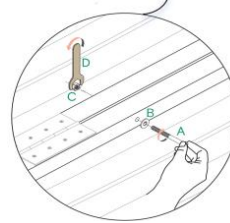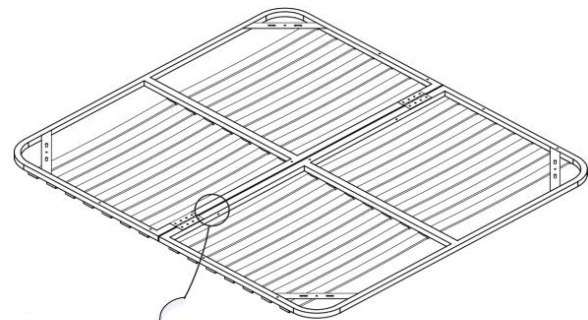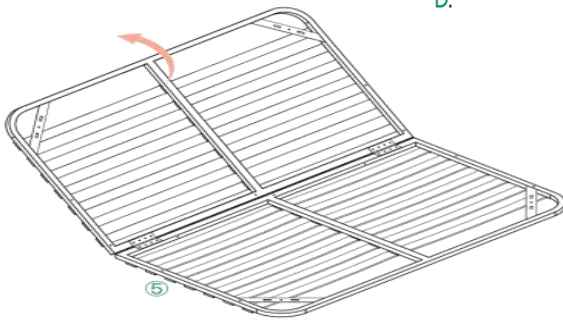

Step 7

Flip the slat set the right way up and align it with the holes on the gas lift arms.


Insert bolts E into corresponding holes on the slat set frame. Attach flange nuts F onto the bolts from the other side and fix them with the screwdriver H and spanner G.

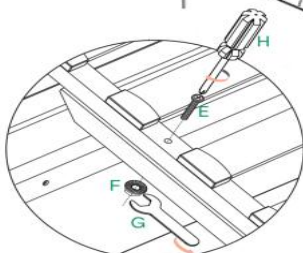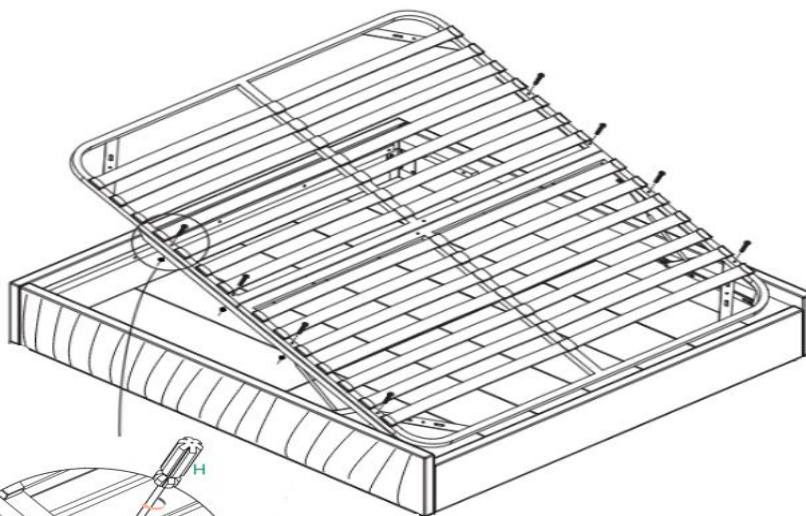

Bronte Storage Bed

BED-BRONT-RVEL

Step 8

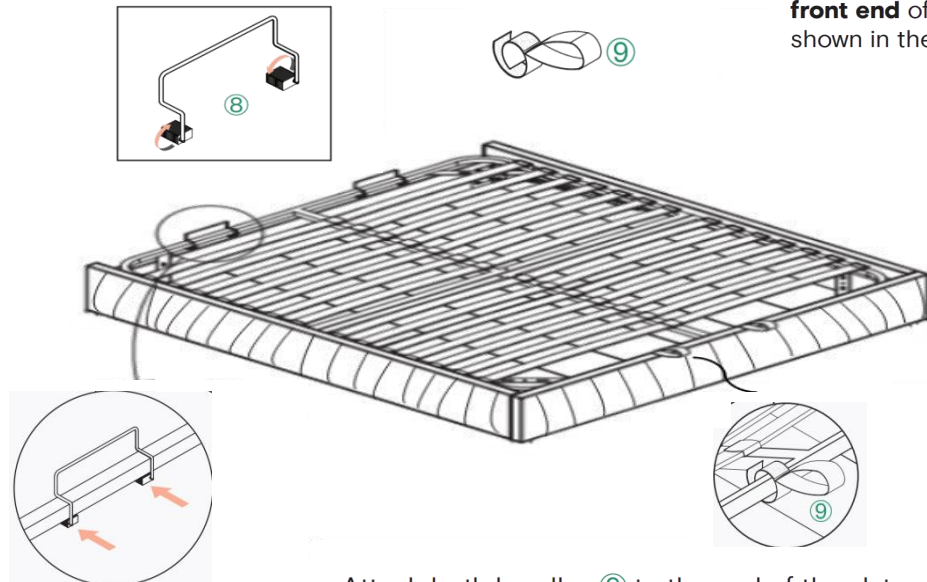

The rubber blocks on the mattress retainer ⑧ can be rotated into different positions. Rotate both rubber blocks to be horizontally longer. Repeat this for the other retainer. Clip the mattress retainers to proper spots on the **front end** of the slat set frame from inside as shown in the diagram below.

Attach both handles ⑨ to the end of the slat set frame.

Step 9

Enjoy your new Gaslift Bed Base!

Warning

1. Please do NOT sit on the bed frame without a mattress.
2. The maximum loading weight for the bed base is 350kg. Please do NOT exceed the weight limit.
3. Please always use the handles to lift and lower the bed frame to avoid trapping your fingers. Always use both hands.
4. To make sure that the gas lift mechanism performs properly and can be used for a longer time, choose a mattress/topper under 70kg.
5. Do not allow children to play around the bed when it is lifted up.

