




Boston Metal Stool


CF_CS005

PRODUCT PARTS INCLUDED

Before assembly please prepare




A

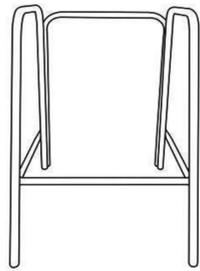

FRAME x1


B

Face

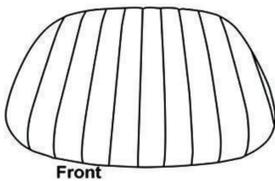

Front


Back

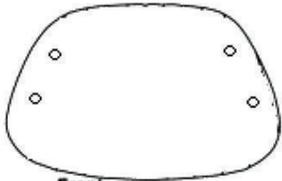

Front

SEAT x1

C

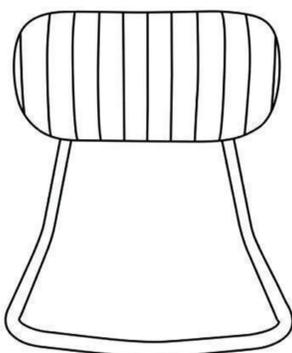

BACKREST x1

D



SCREW x4 (M6x35mm)

E




SCREW x4 (M5x35mm)

F




SPANNER x1

STEP 1

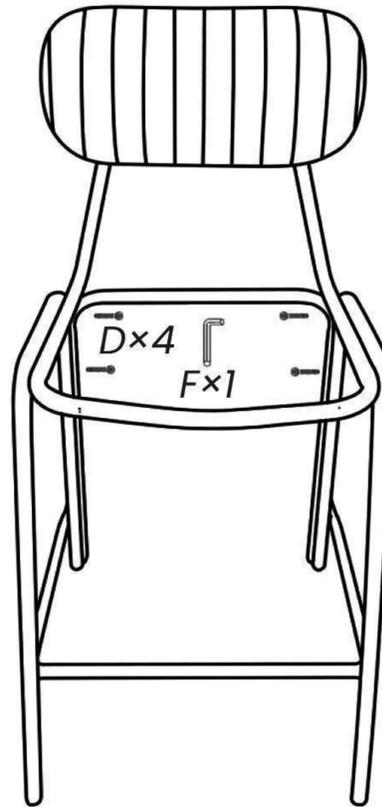

STEP 2

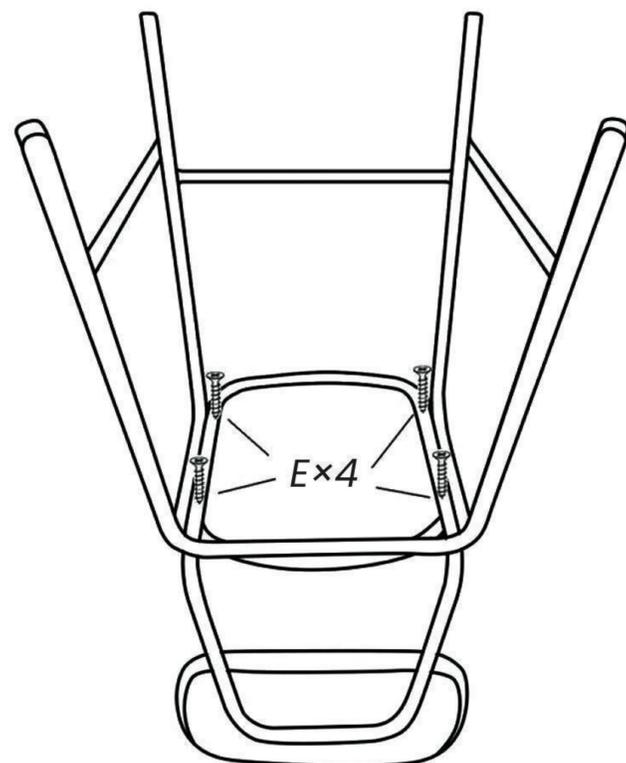

Instruction : Drill Wood screw directly into the underboard.

Note:1.Holes have been cut into the fabric under the seat as a guide for alignment to position the screw.
2.Guide holes in the wood are not required as the screw creates its own thread.