




Maddox Carver Dining Chair

CF_CS057B/ARM

PRODUCT PARTS INCLUDED

Before assembly please prepare




A



BASE x1

B

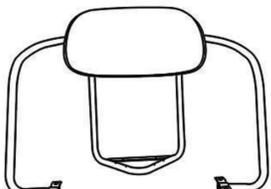

BACK x1

C




SCREW x6 (M6x25mm)

D



SCREW x4 (M4x40mm)

E




SCREW WASHER x6 (M6x13mm)

F




SPANNER x1

STEP 1

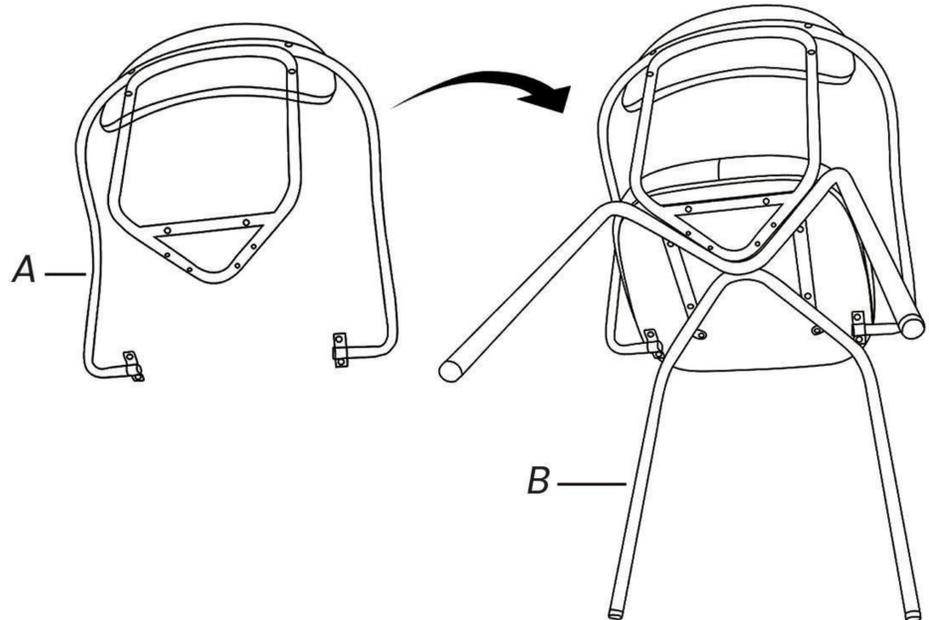

STEP 2

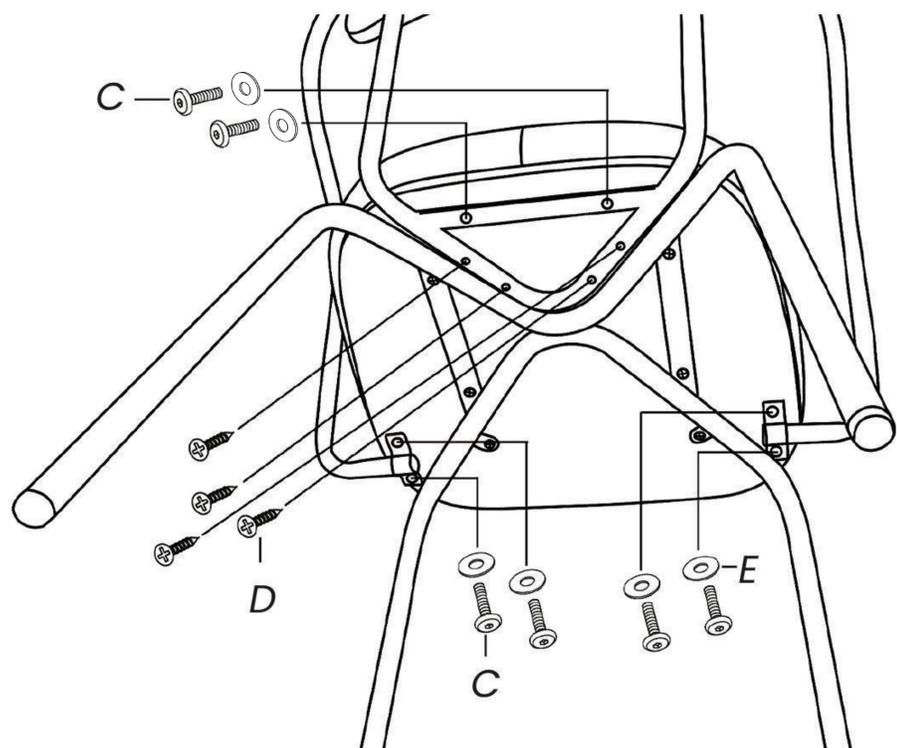

Note: 1. Guide holes in the wood are not required as the screw creates its own thread.

2. Drill Wood screw directly into the underboard with screw D and E.