

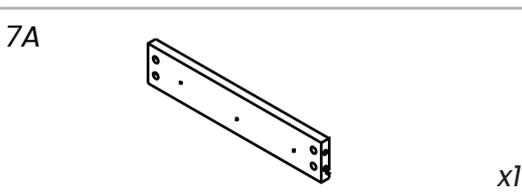
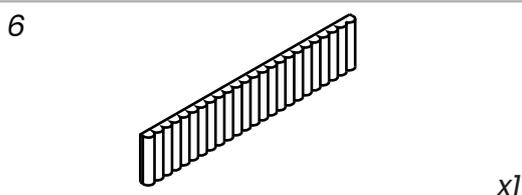
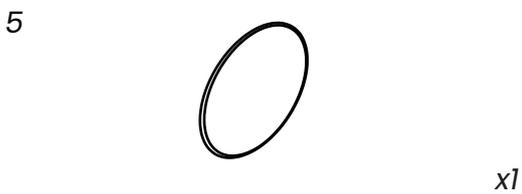
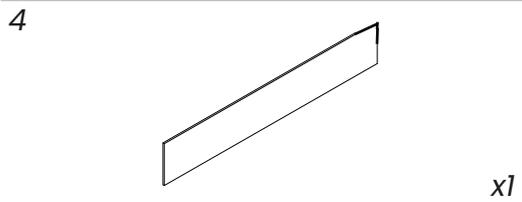
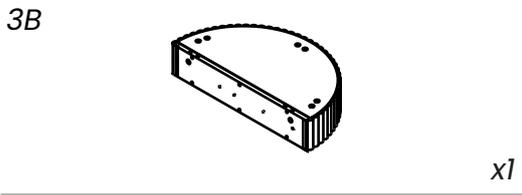
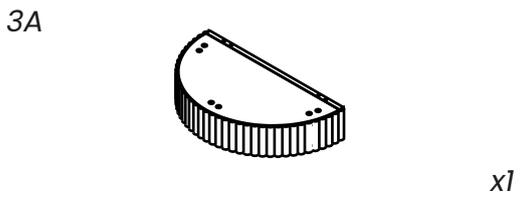


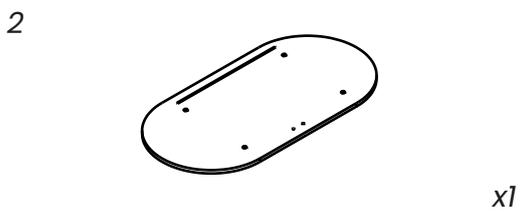


Santana Dressing Table, Smokey Oak

CF_HE2377-2/SMK-OAK_bundle


PRODUCT PARTS INCLUDED

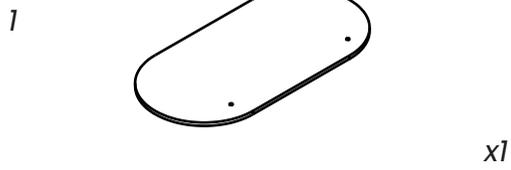

STEP 1

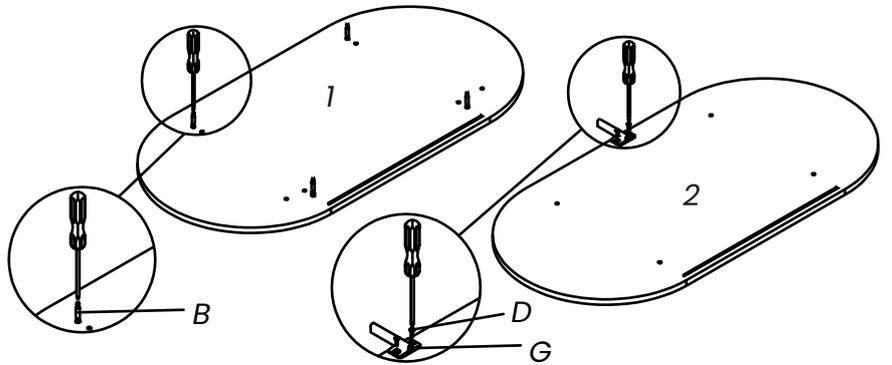

STEP 2

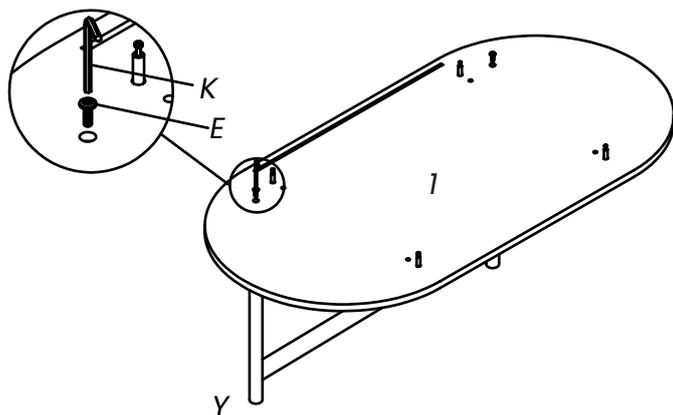




Santana Dressing Table, Smokey Oak

CF_HE2377-2/SMK-OAK_bundle


PRODUCT PARTS INCLUDED

7B

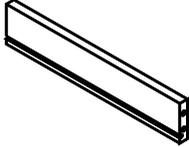


x1

8

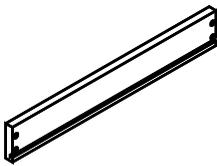

x1

9

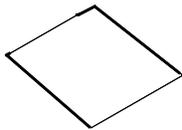


x1


STEP 3



$$F = F1 + F2$$

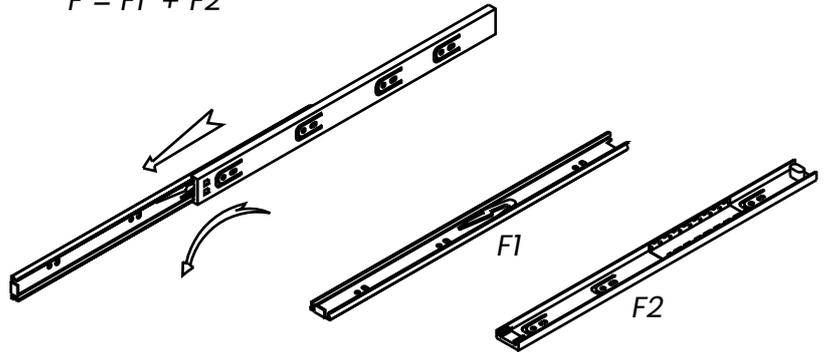

STEP 4

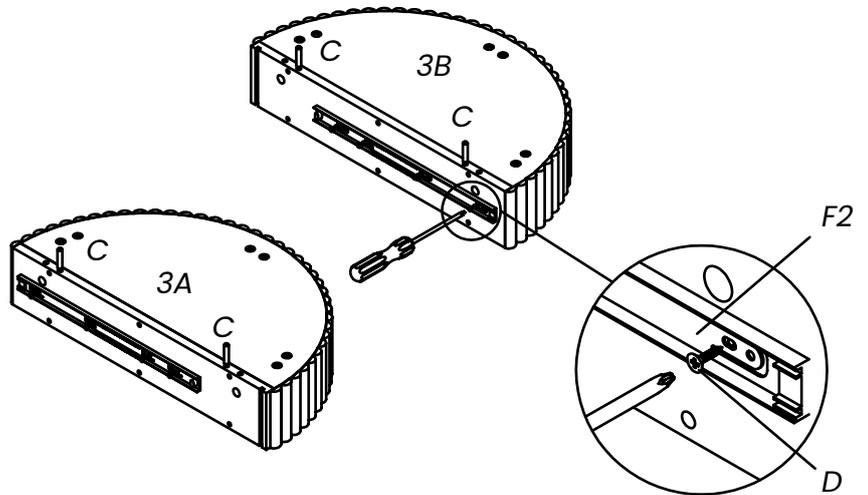



Santana Dressing Table, Smokey Oak

CF_HE2377-2/SMK-OAK_bundle

PRODUCT PARTS INCLUDED



$\phi 15 \times 12$

Ax4



M6x35

Bx4



$\phi 8 \times 40$

Cx4



M3.5x15

Dx22




M6x20

Ex2



400mm

Fx2




Gx1




$\phi 7 \times 37$

Hx4

STEP 5

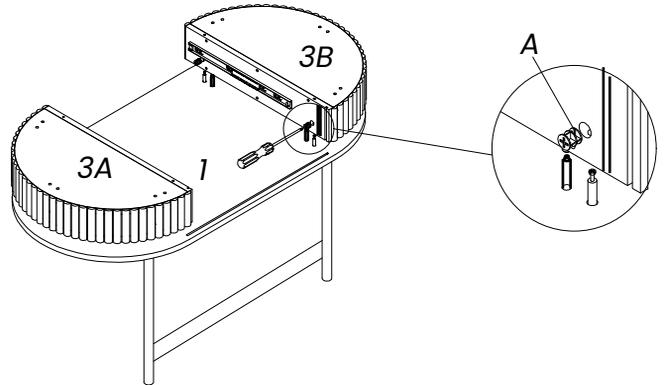

STEP 6

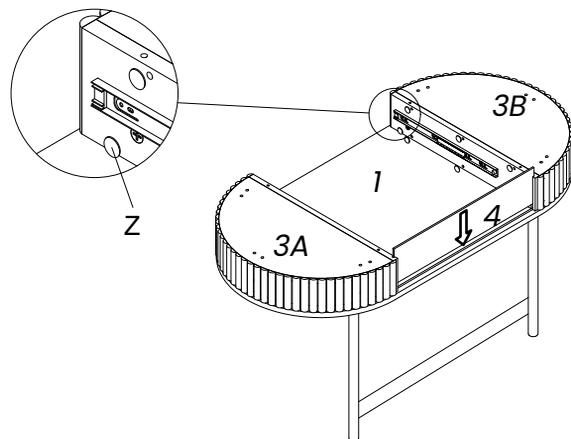




Santana Dressing Table, Smokey Oak

CF_HE2377-2/SMK-OAK_bundle


PRODUCT PARTS INCLUDED



Ix2

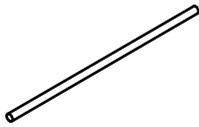


Jx1




M5

Kx1



Lx1



Mx1



M6x45

Nx2



M6x40


Ox8





φ12xM6x1

Px18

STEP 7

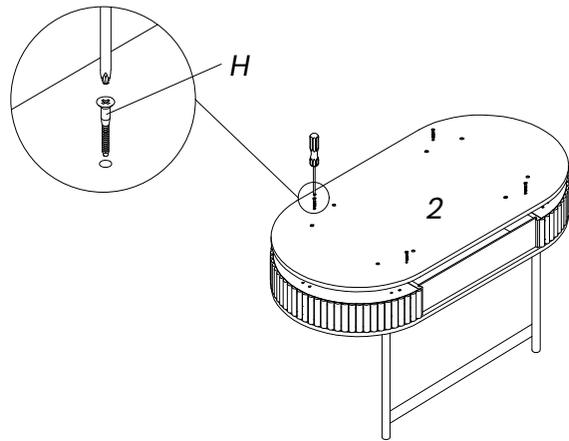

STEP 8

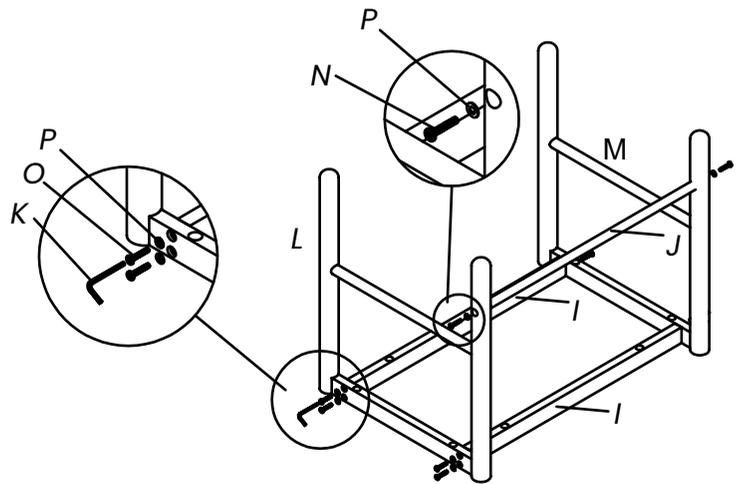




Santana Dressing Table, Smokey Oak

CF_HE2377-2/SMK-OAK_bundle

PRODUCT PARTS INCLUDED

M6x30  Qx8

M6x24  Rx8

φ 12x12  Sx8

 Tx1


 Ux1

 Vx1



 Wx2

 Xx8

STEP 9

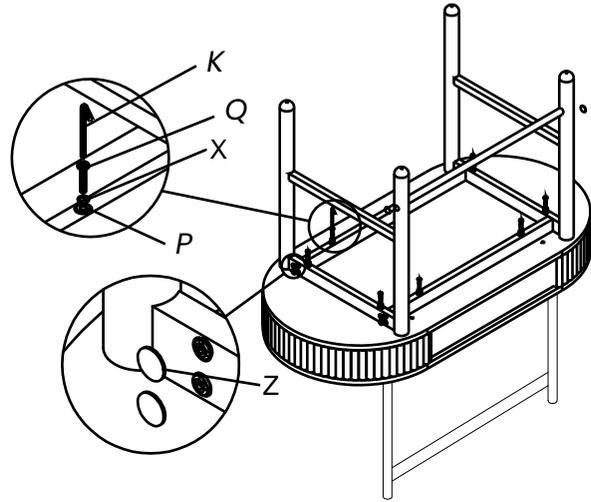

STEP 10

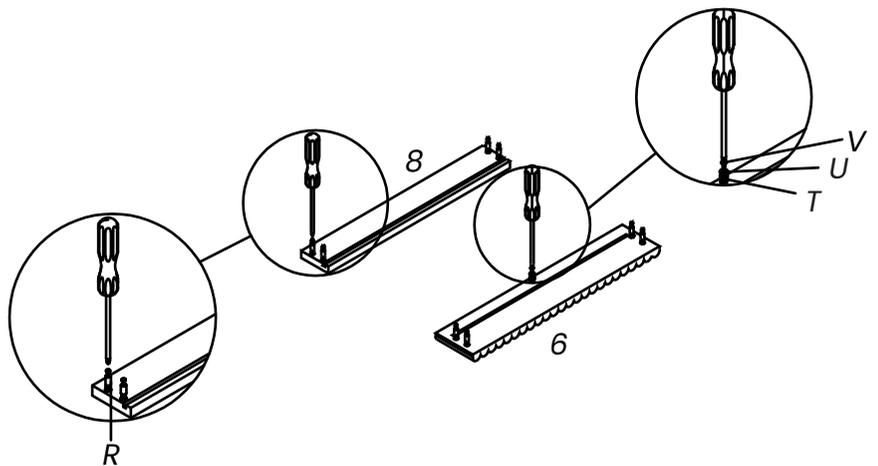



Santana Dressing Table, Smokey Oak

CF_HE2377-2/SMK-OAK_bundle

PRODUCT PARTS INCLUDED



Yx1



φ20

Zx26




φ20

AAx8


STEP 11



Sx4

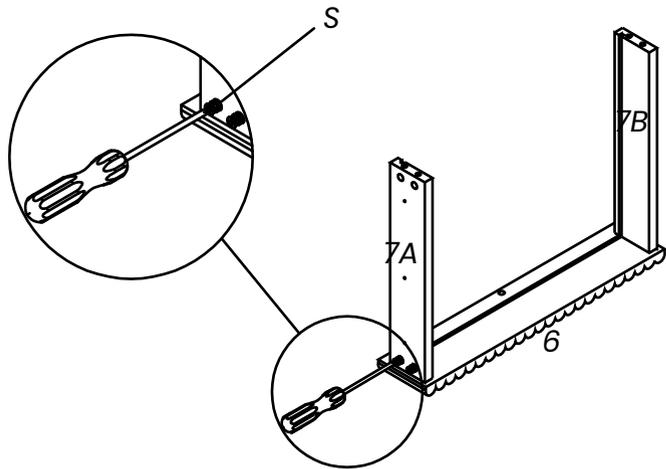

STEP 12

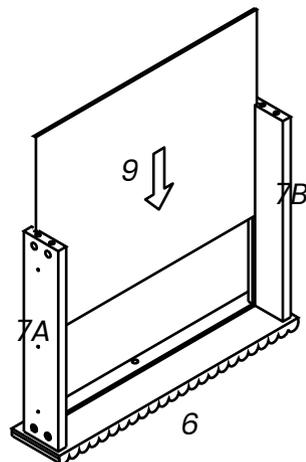





Santana Dressing Table, Smokey Oak

CF_HE2377-2/SMK-OAK_bundle

STEP 13

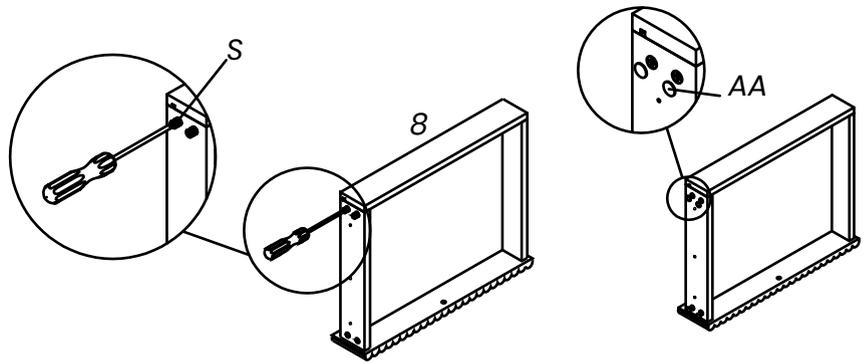

STEP 14

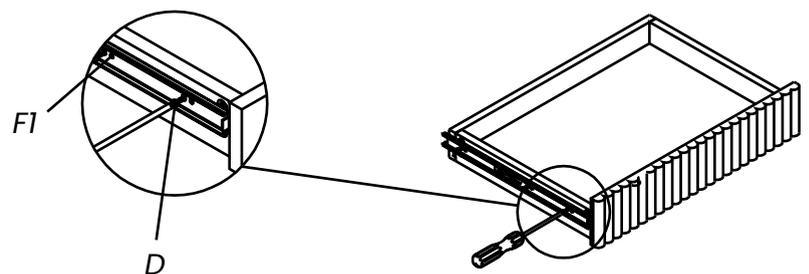





Santana Dressing Table, Smokey Oak

CF_HE2377-2/SMK-OAK_bundle

STEP 15

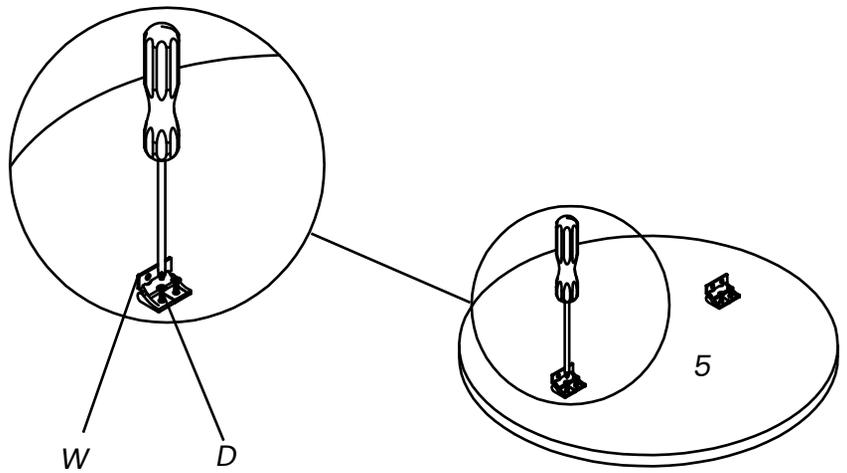

STEP 16

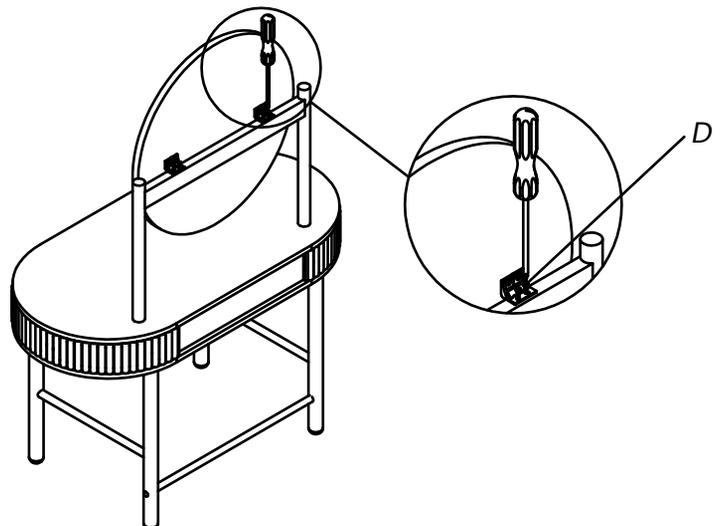





Santana Dressing Table, Smokey Oak

CF_HE2377-2/SMK-OAK_bundle

STEP 17

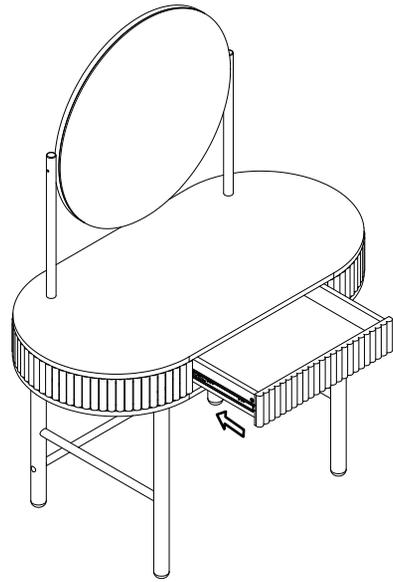

STEP 18

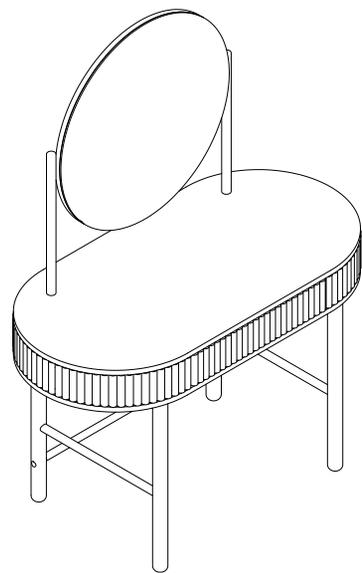

Assembled