



# Kenton Dining Chair

CF\_LF9-05C-1


## PRODUCT PARTS INCLUDED

A




BACKREST X1

B

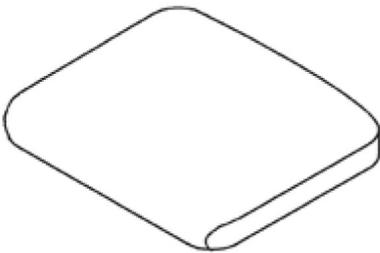

SEAT CUSHION X1

C

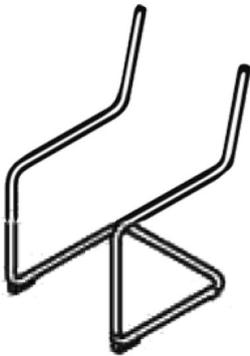

METAL LEG X1

D



SCREW X4

E




SCREW X4



F



ALLEN WRENCH X1

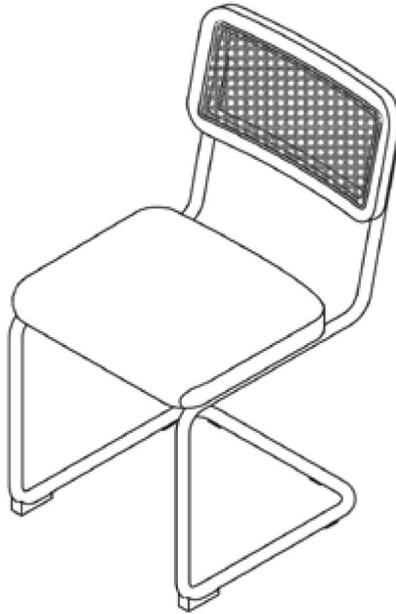

STEP 1

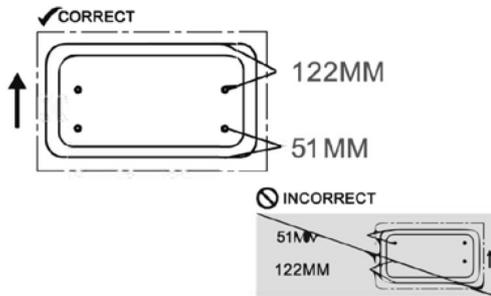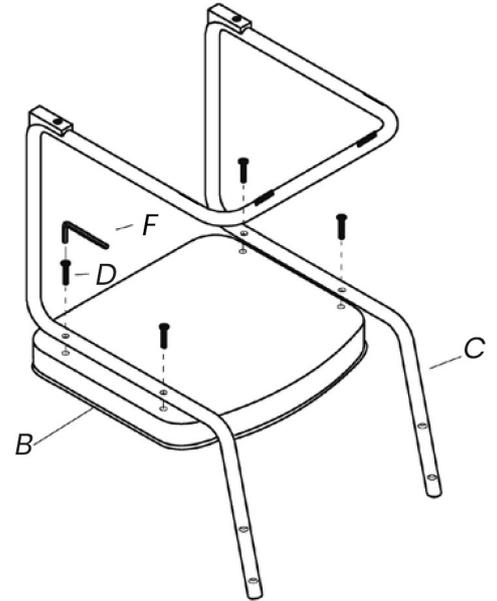

STEP 2

NOTE: To attach the backrest correctly, the lower drill holes should be : 51mm from the bottom edge of the backrest.

The top of the backrest drill holes should be 122mm from the top edge of the backrest.

