



Kenton Dining Chair

CF_LF9-05


PRODUCT PARTS INCLUDED

A



BACKREST X1

B

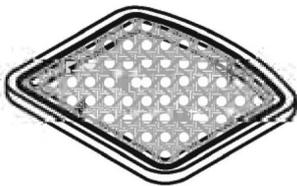

CUSHION X1

C



METAL LEG X1

D




SCREW X8 M6*35mm



E



ALLEN WRENCH X1

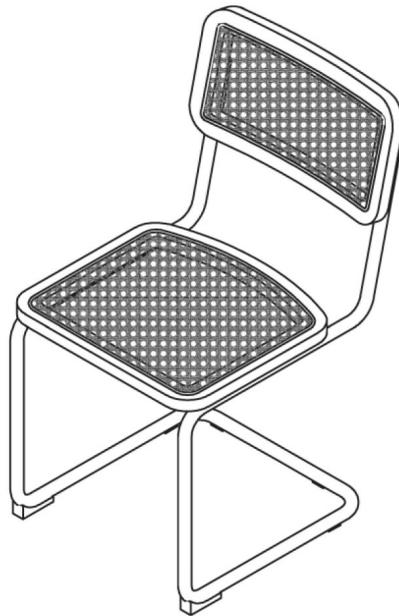

STEP 1

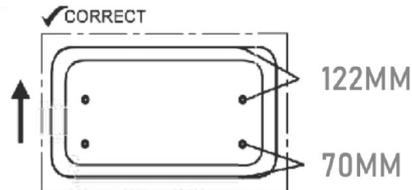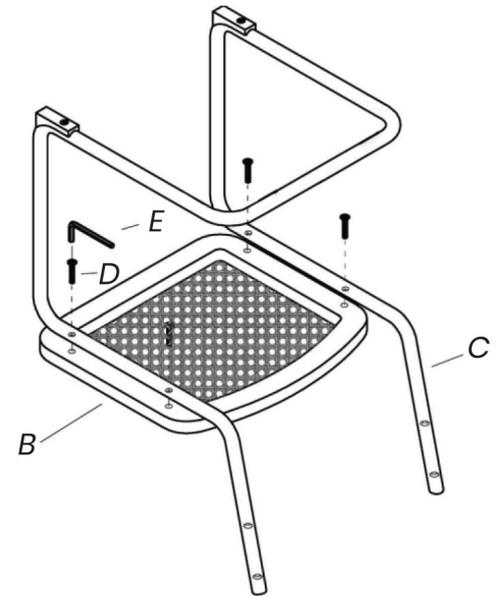

✓ CORRECT

122MM

70MM

⊗ INCORRECT

70MM

122MM

NOTE: To attach the backrest correctly, the lower drill holes should be : 51mm from the bottom edge of the backrest.

The top of the backrest drill holes should be 122mm from the top edge of the backrest.

STEP 2

