




Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL

PRODUCT PARTS INCLUDED




















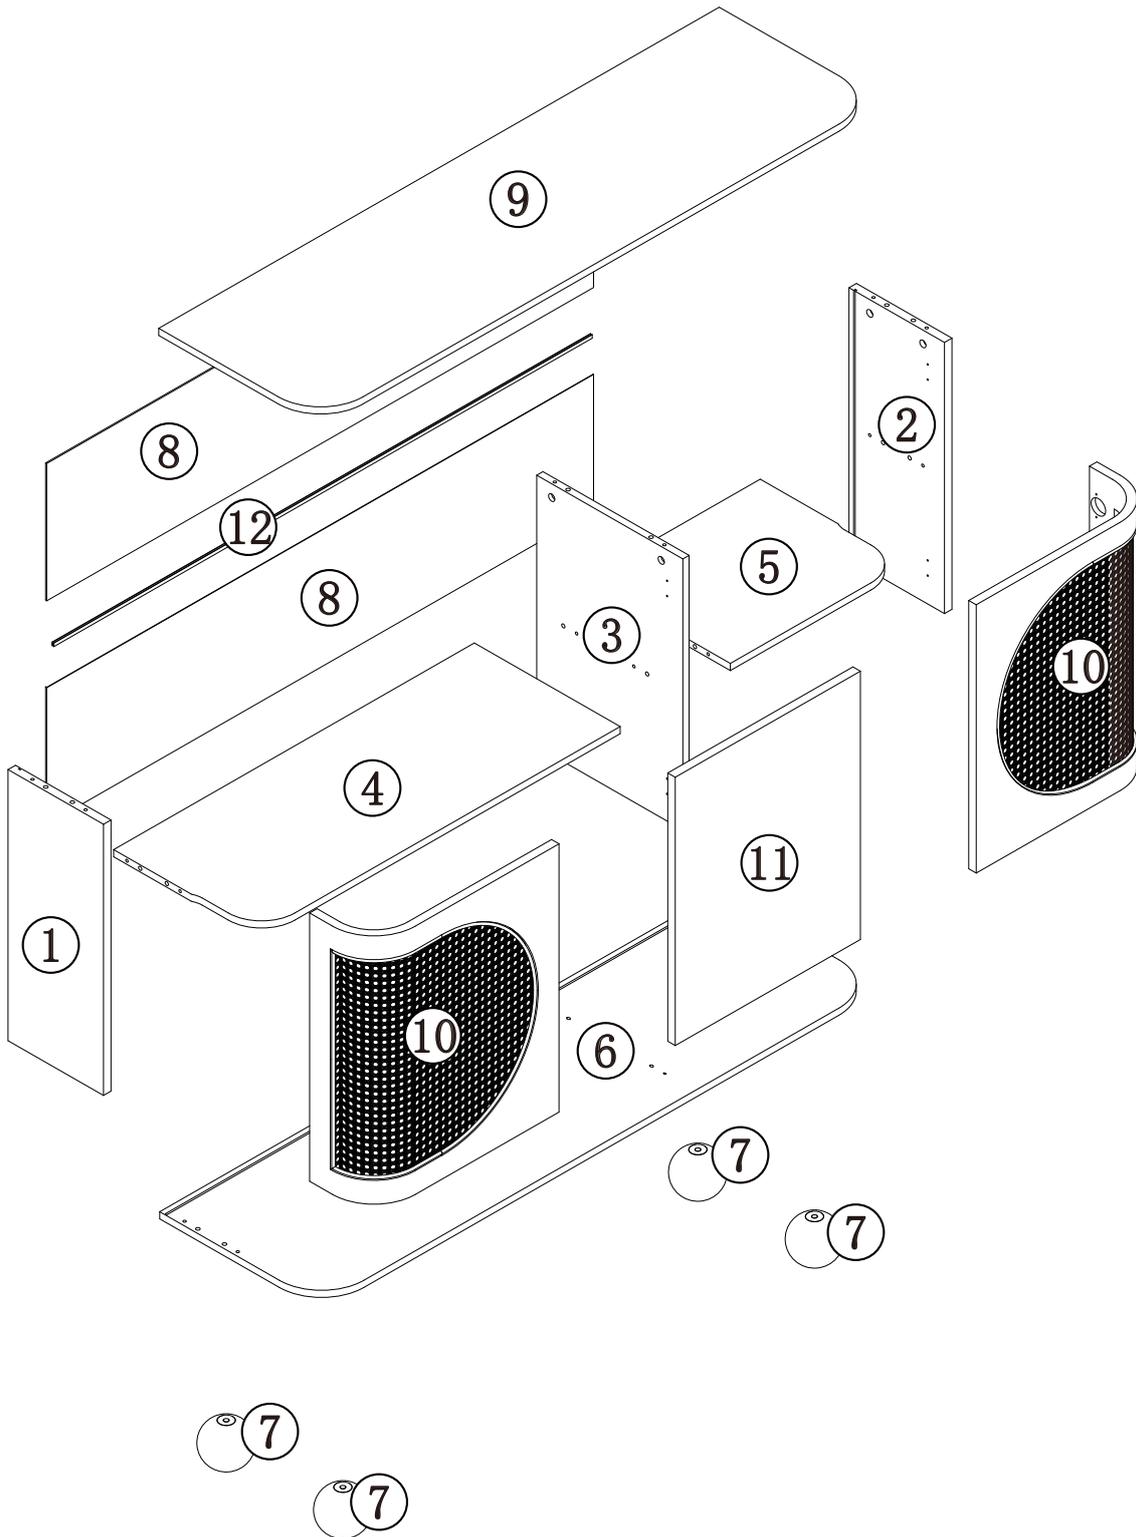




Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL

PRODUCT PARTS INCLUDED

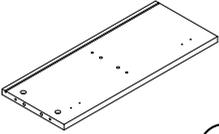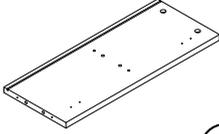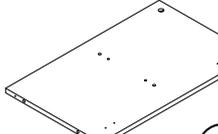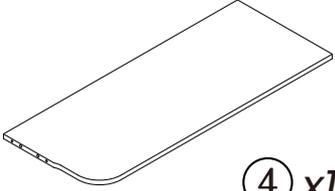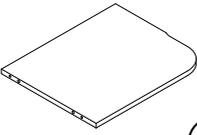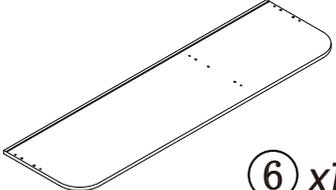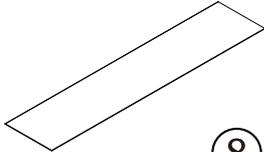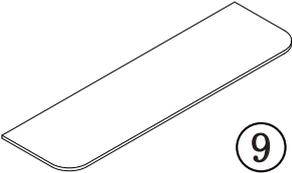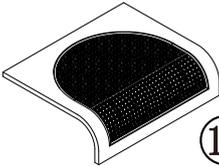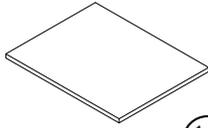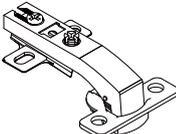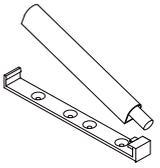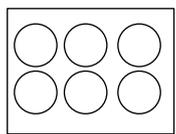 ① x1	 ② x1	 ③ x1	 ④ x1
 ⑤ x1	 ⑥ x1	 ⑦ x4	 ⑧ x2
 ⑨ x1	 ⑩ x2	 ⑪ x1	 ⑫ x1
 7x39mm Ax12	 Bx12	 8x30mm Cx16	 3.5x14mm Dx30
 7x39mm Ex2	 Fx6	 8x30mm Gx16	 3.5x14mm Hx12
 Ix4	 Jx2	 Kx1	 8x50mm Lx2
 Mx4	 Nx4	 Ox1	 Px3
 Qx2	 8x35mm Rx4	 Sx1	



Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL


STEP 1



Ax2



Cx12






CAM-LOCK

Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)



Shoulder
NO GAP

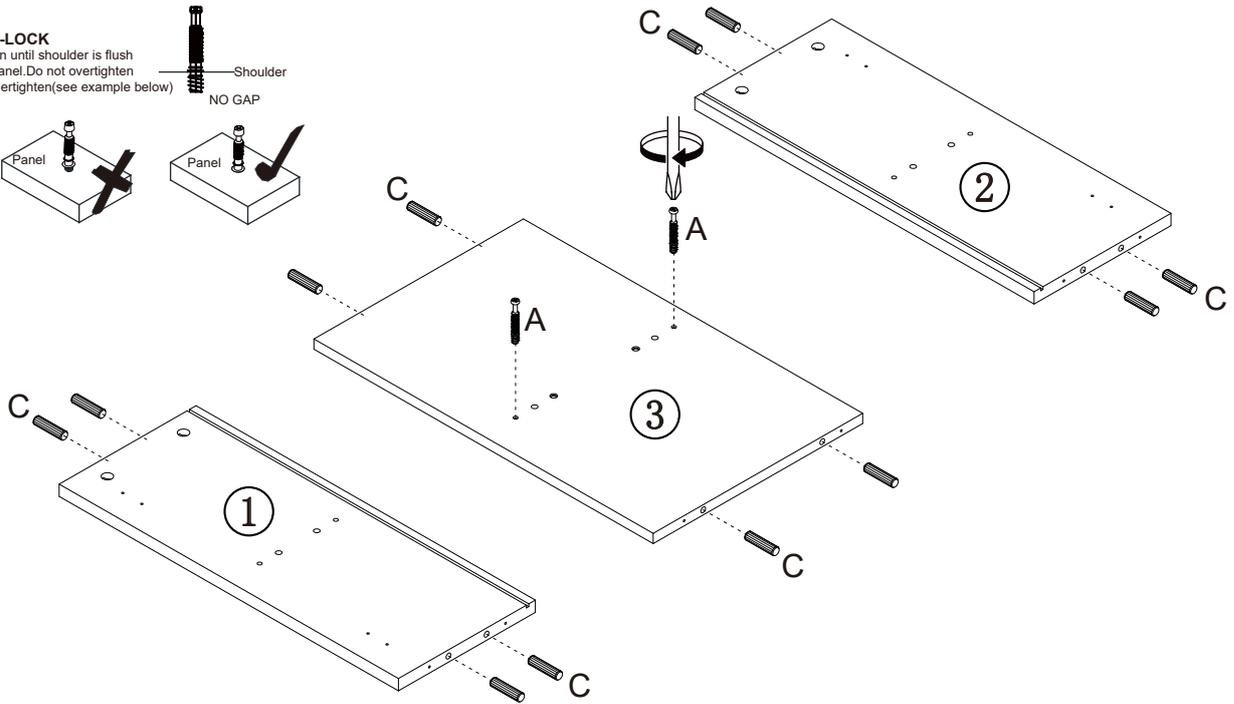


STEP 2



Cx4



Lx2

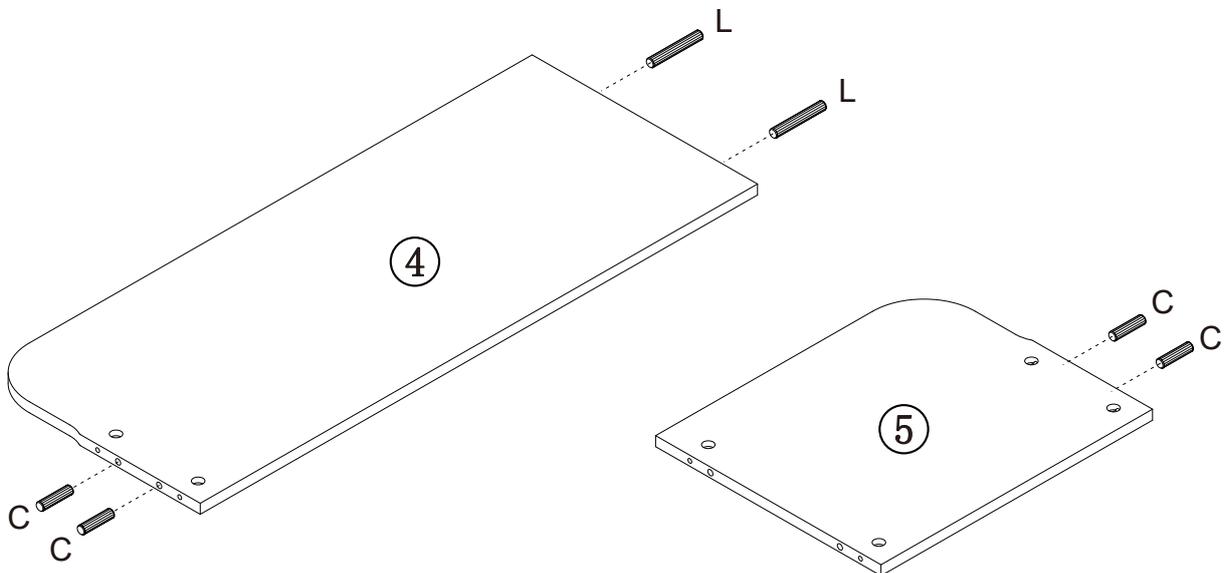



Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL

STEP 3



Ax4

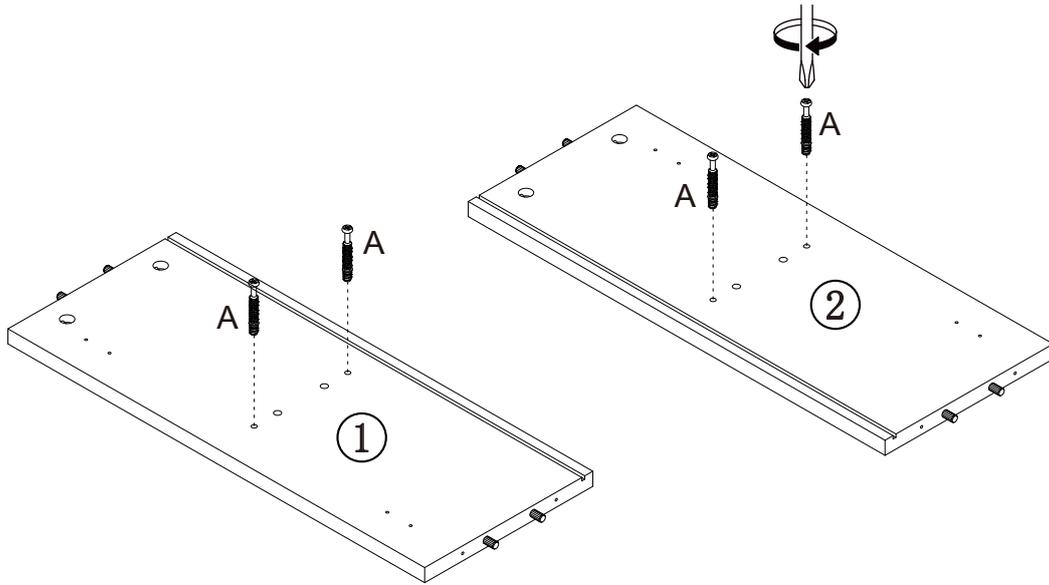



STEP 4



Bx2





Ex2

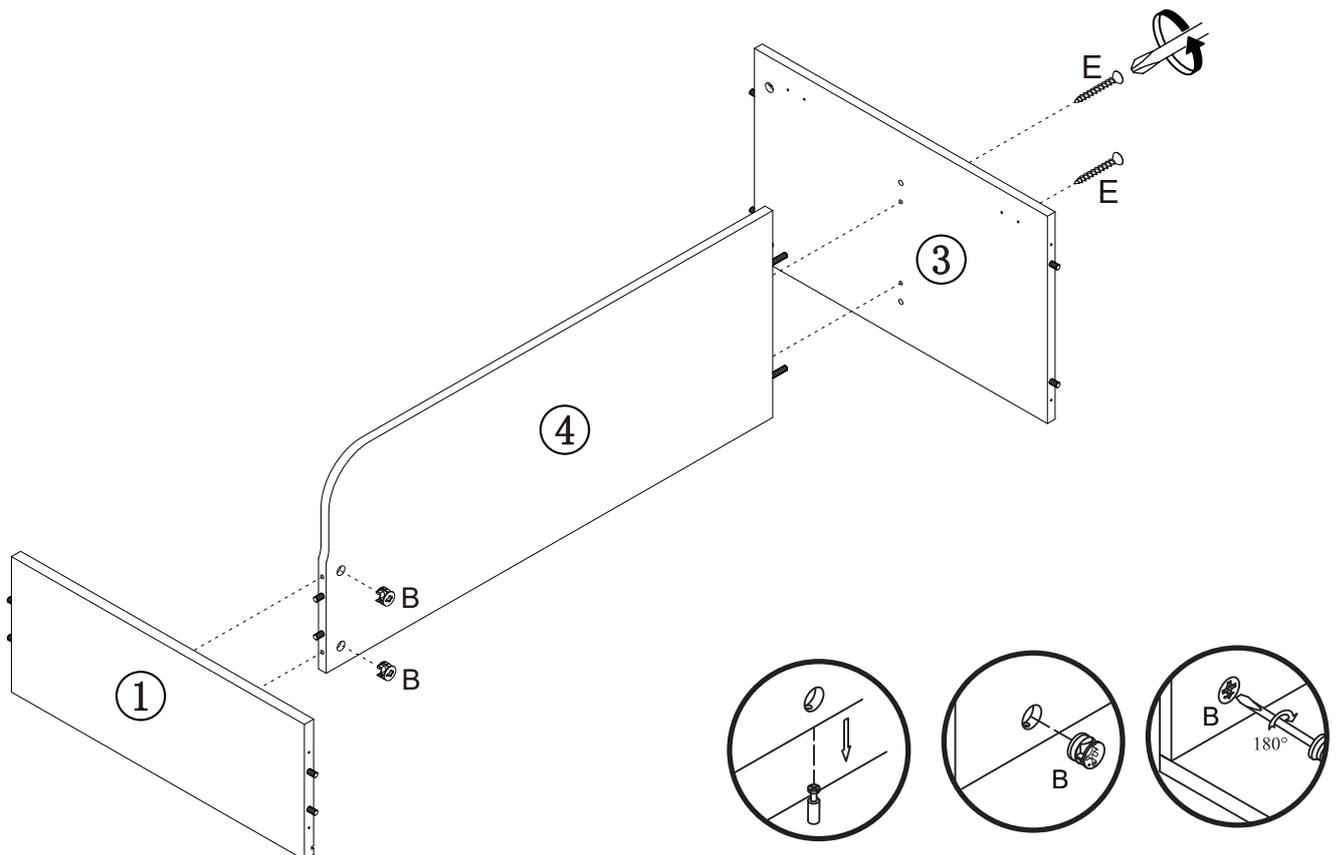



Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL

STEP 5

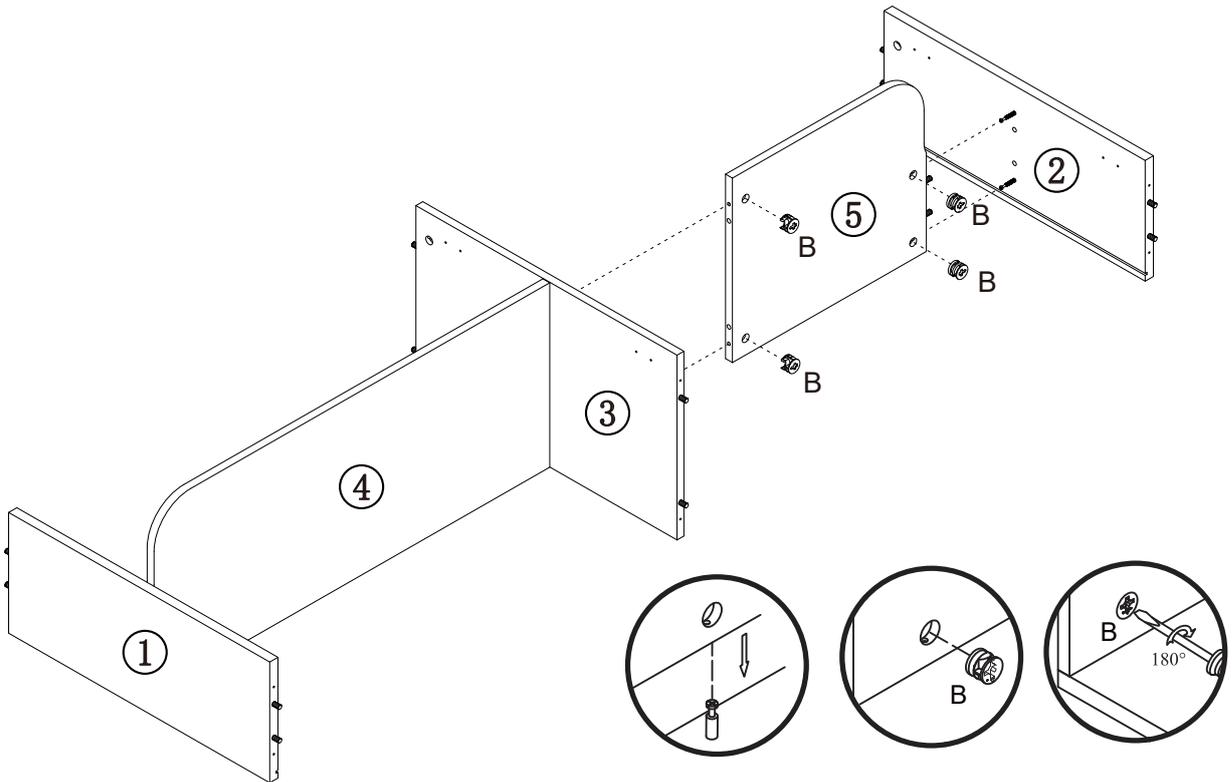

STEP 6

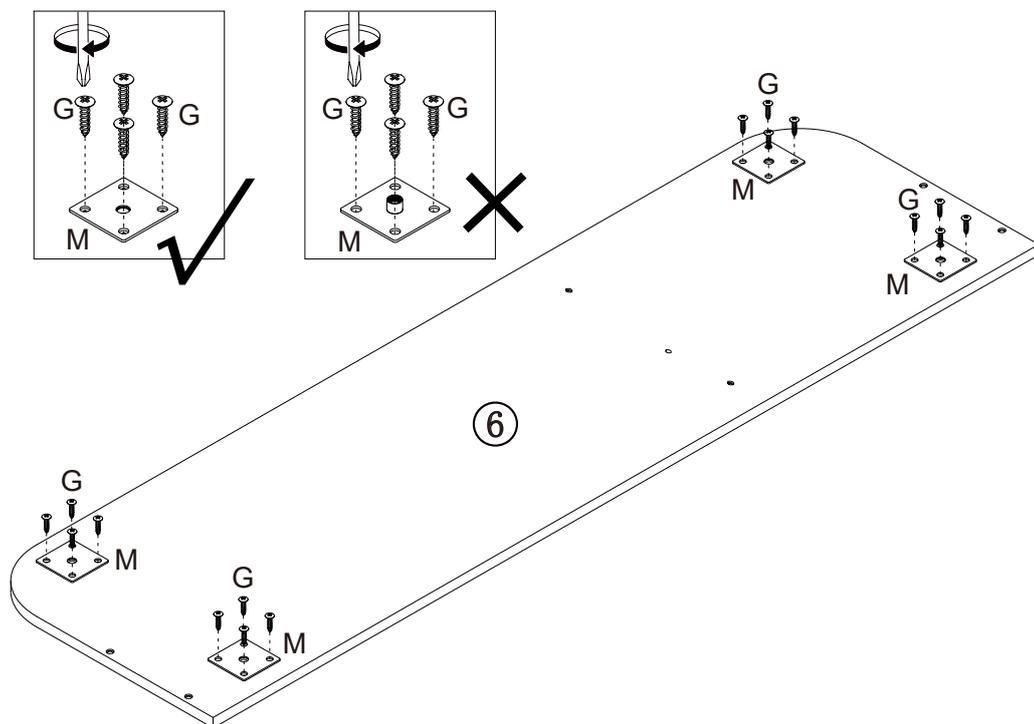





Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL

STEP 7

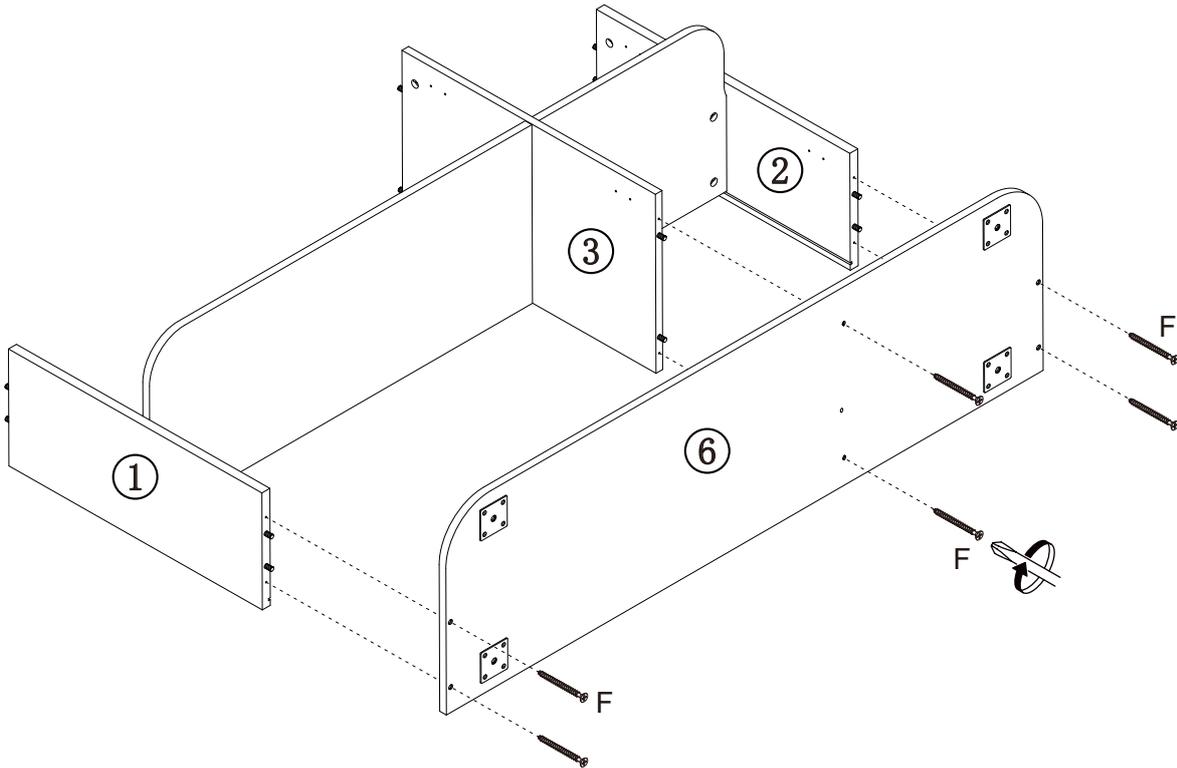

STEP 8

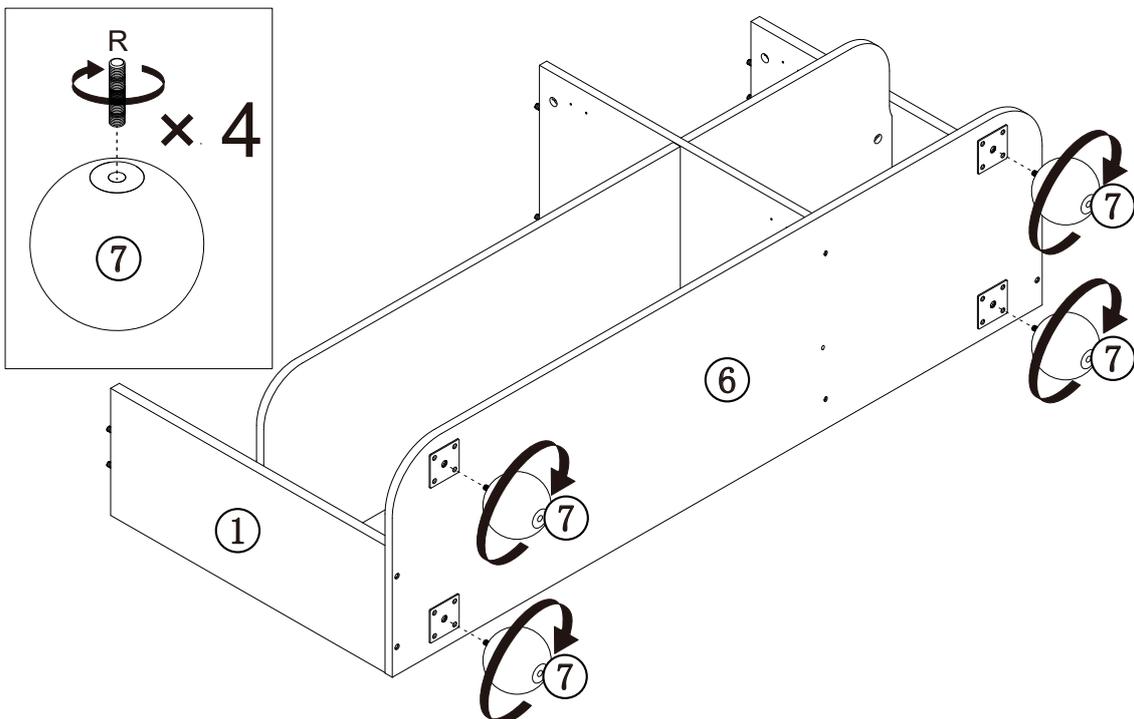





Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL

STEP 9

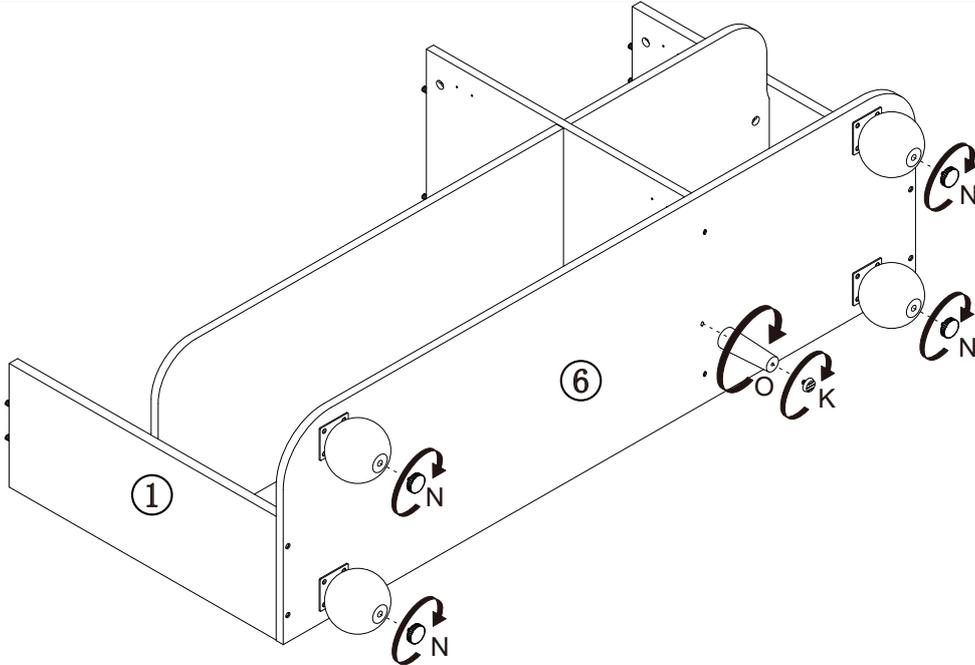


STEP 10

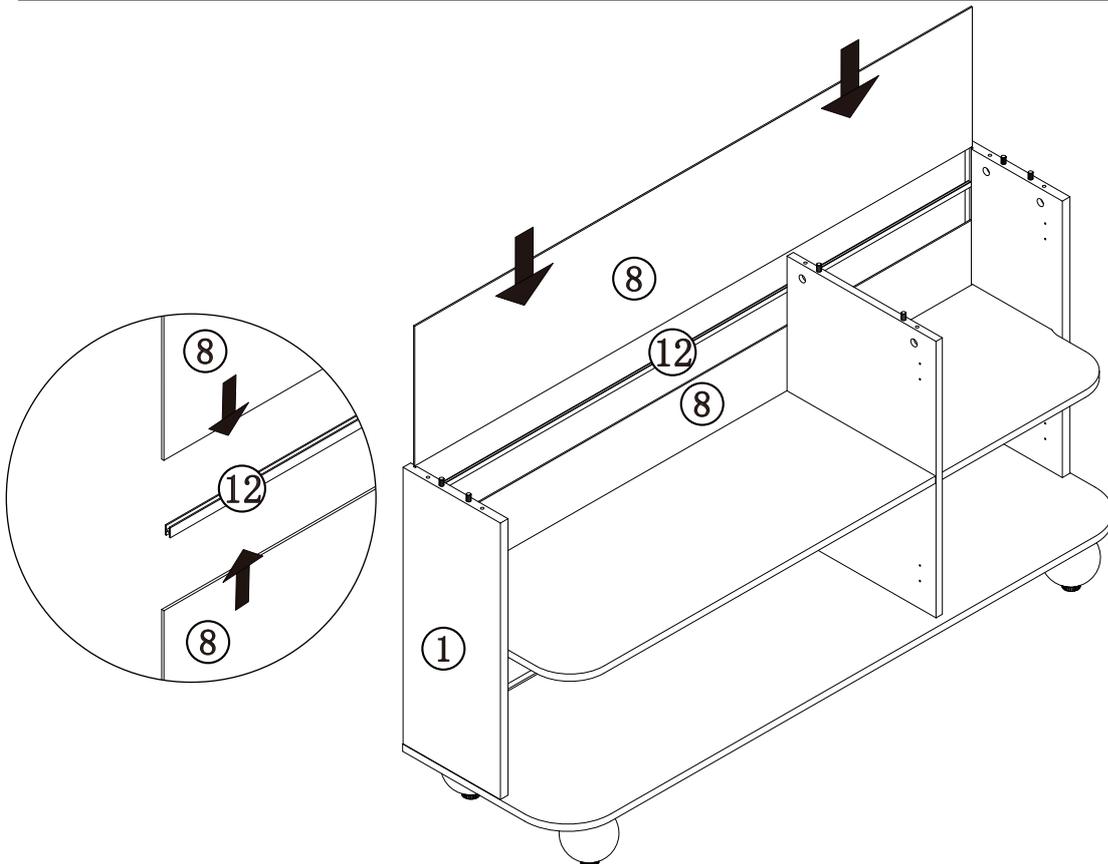

Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL




STEP 11

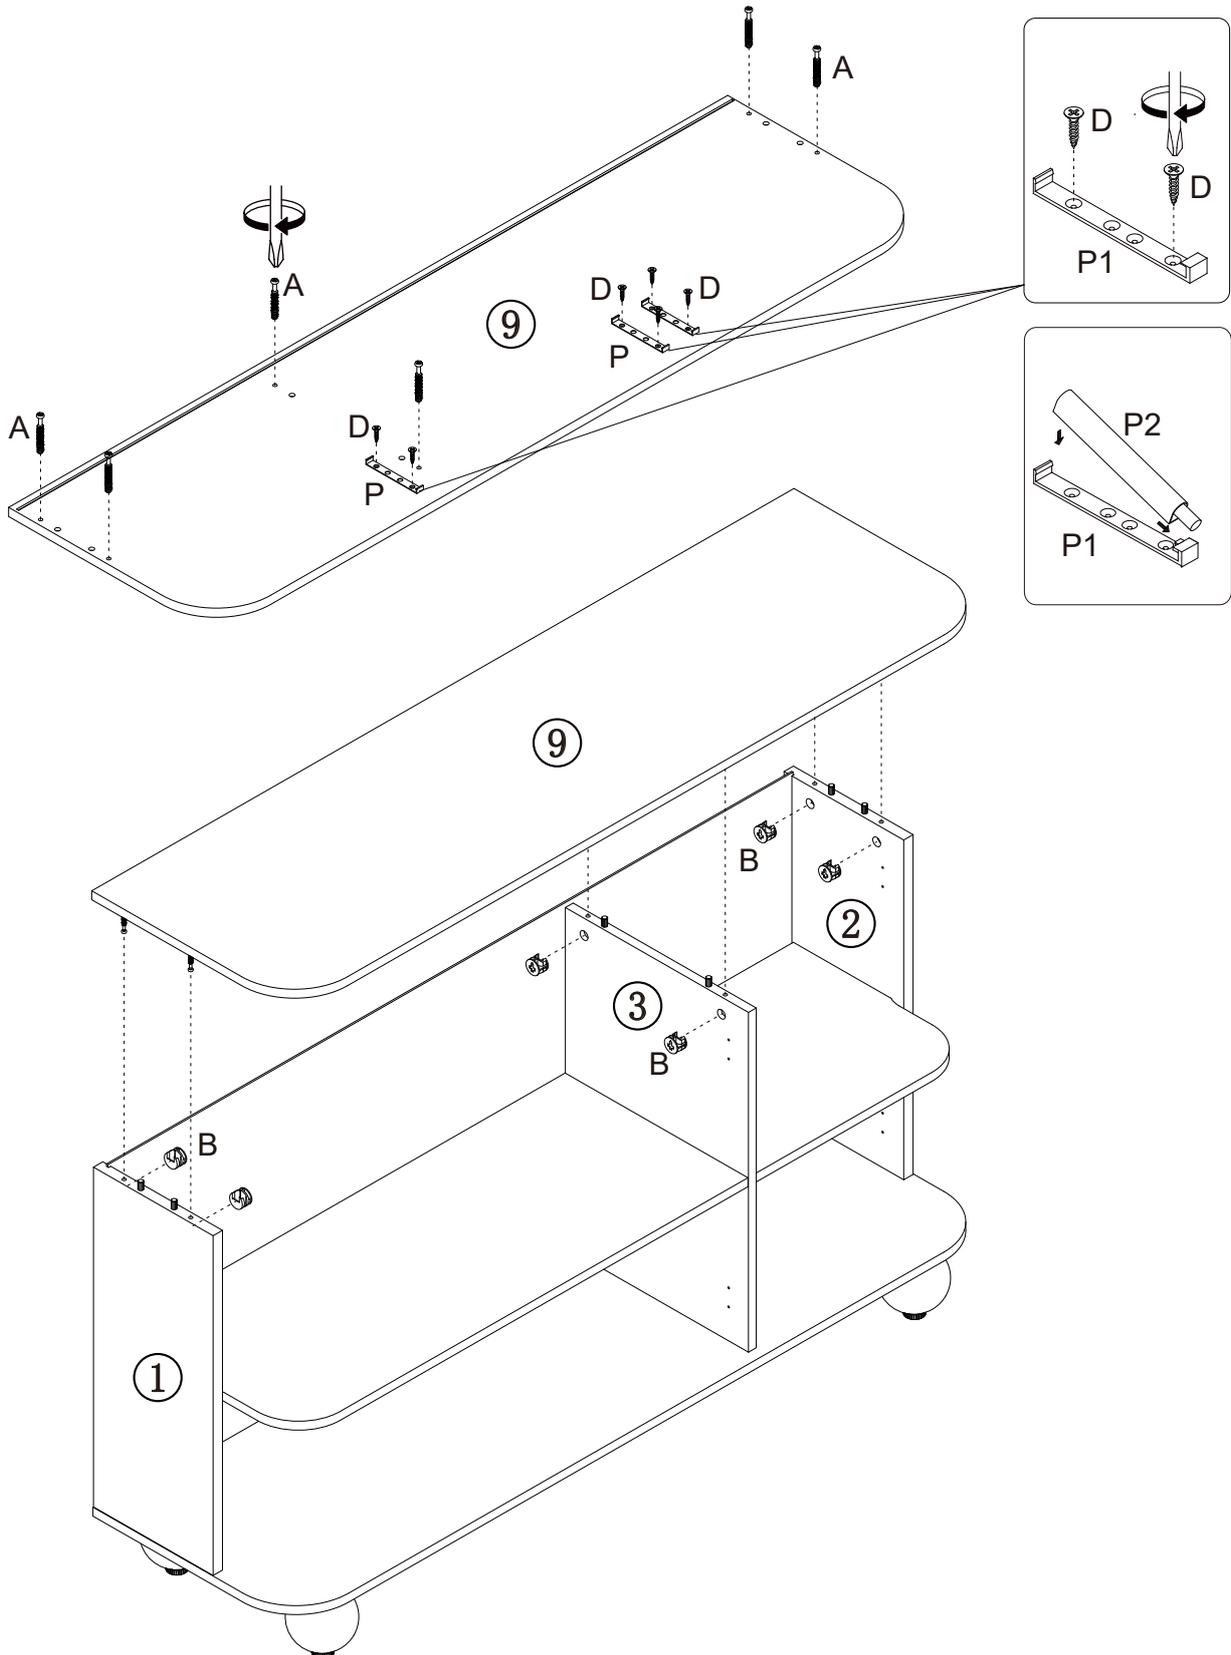


Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL

STEP 12

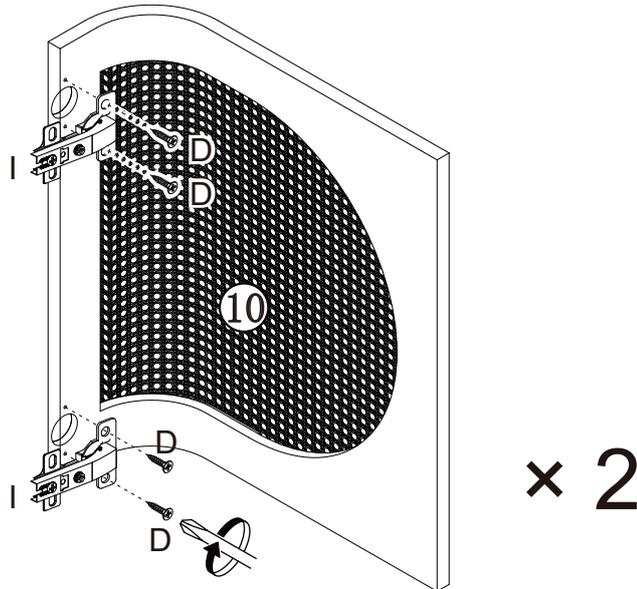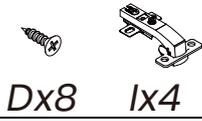

STEP 13

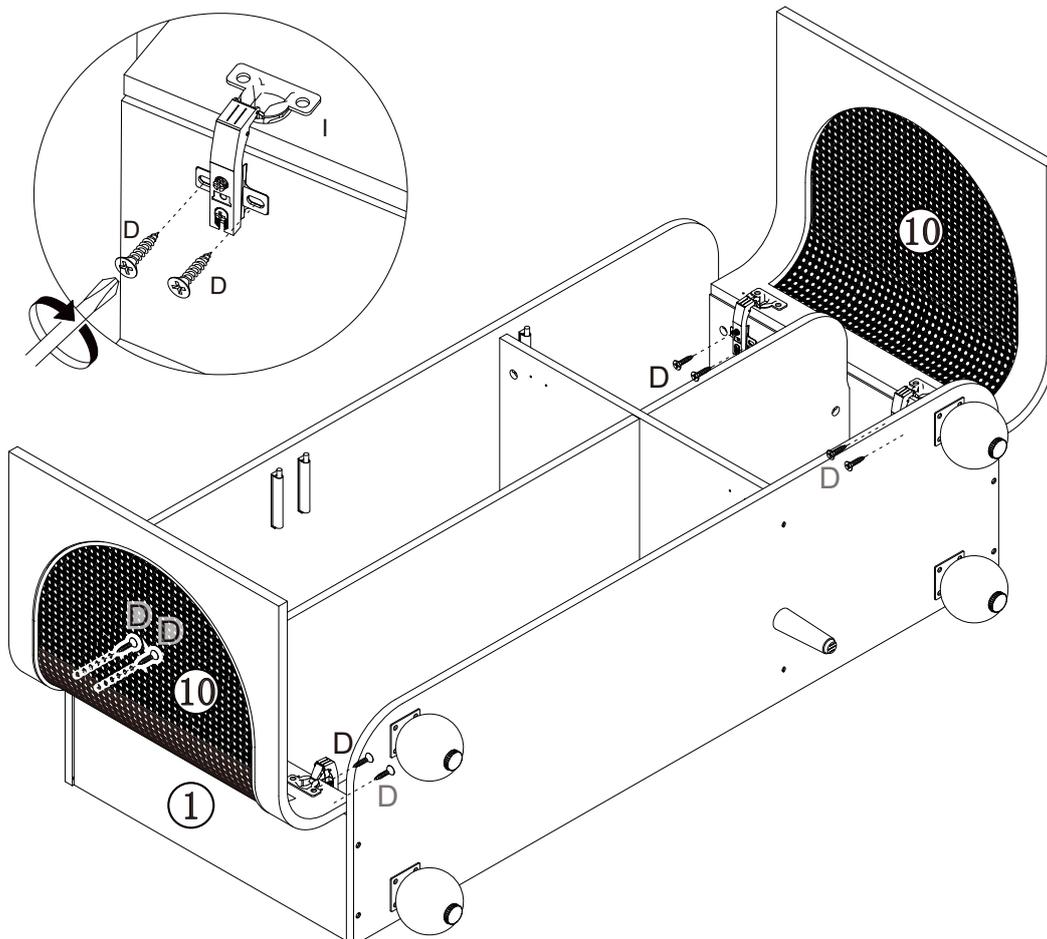




Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL



STEP 14

 
Dx4 Jx2

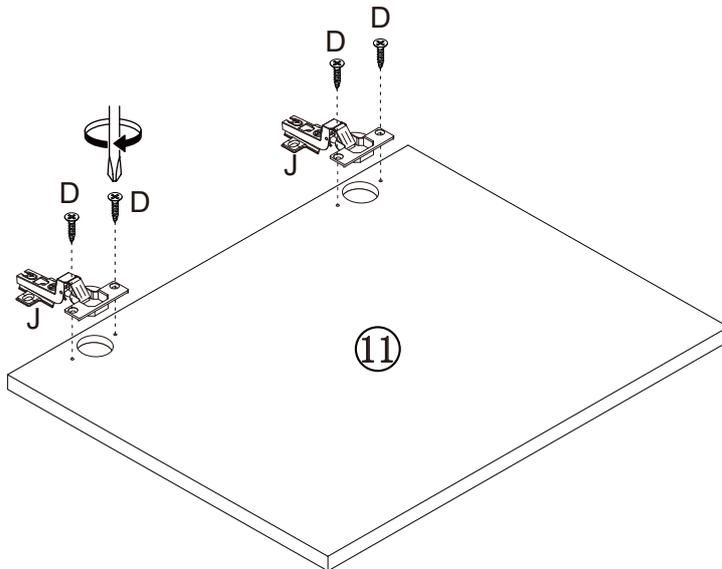

STEP 15


Dx4

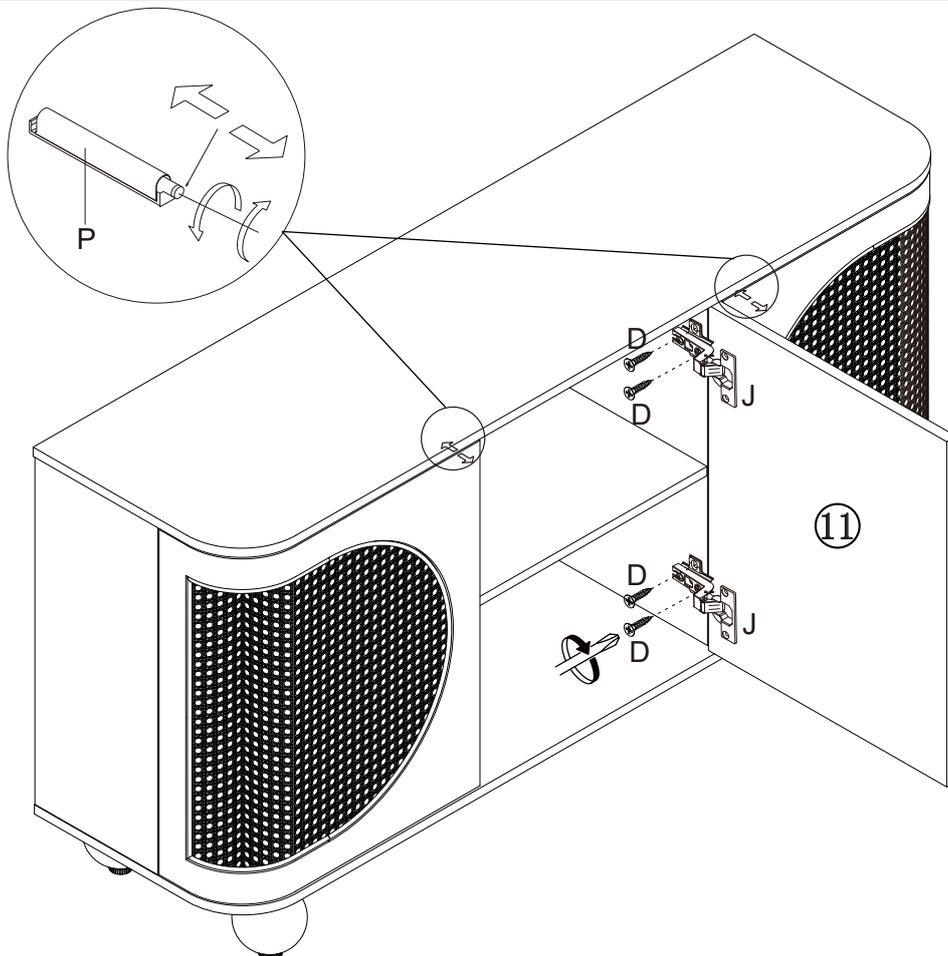





Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL


STEP 16

Please adjust the height of the legs to keep the bottom level.

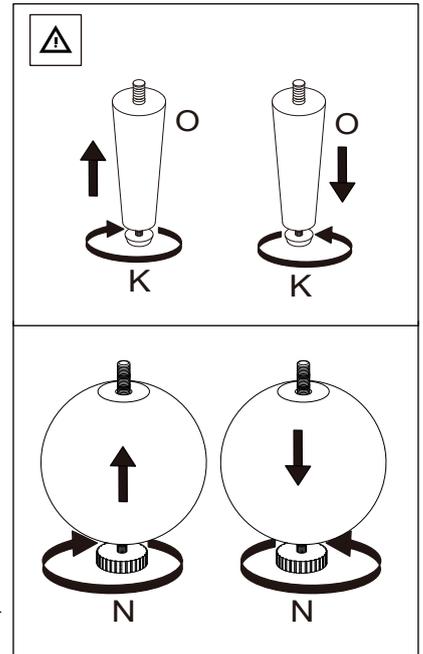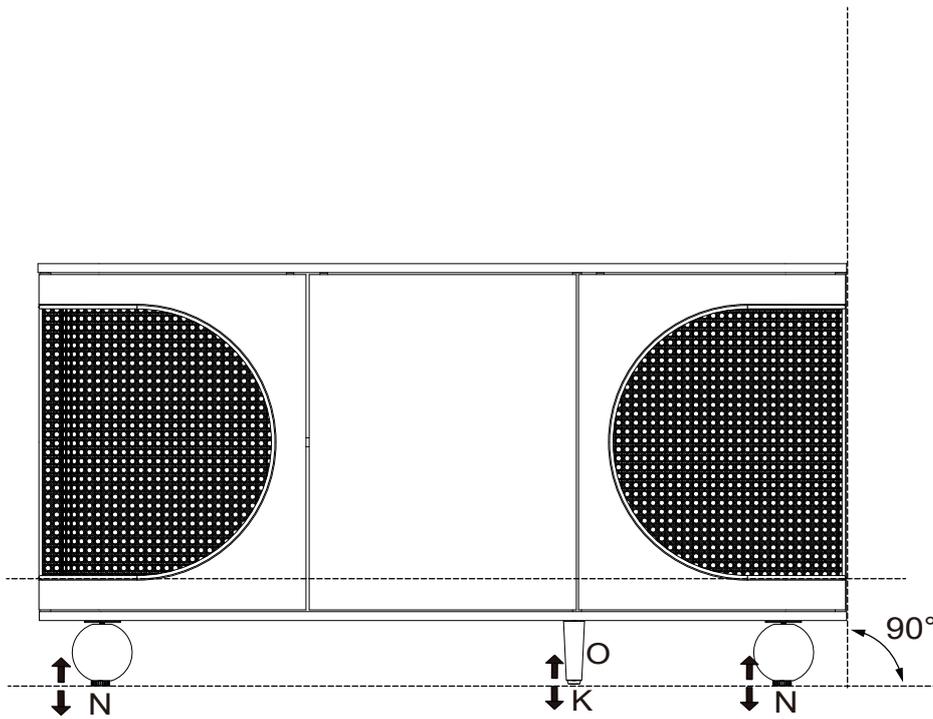

STEP 17


Hx12







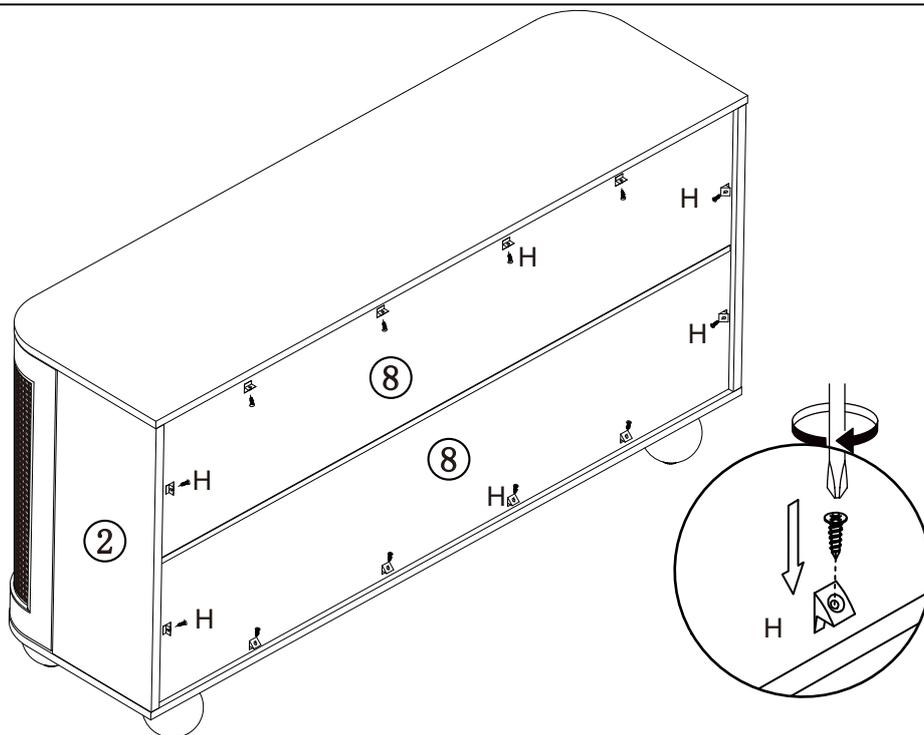




Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL

STEP 18

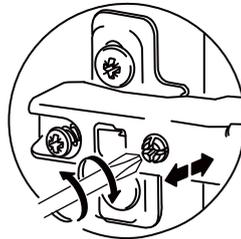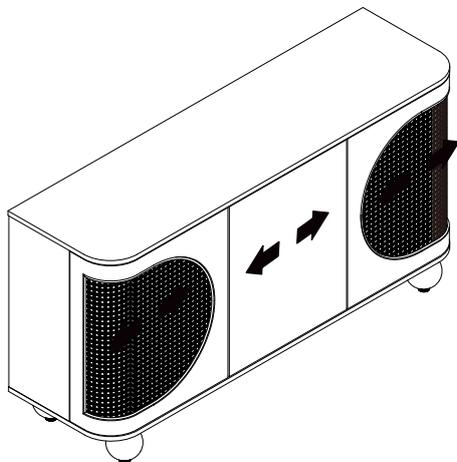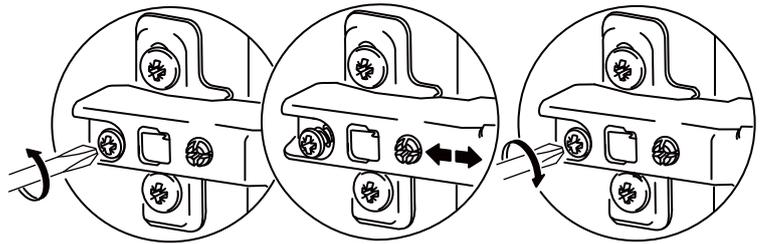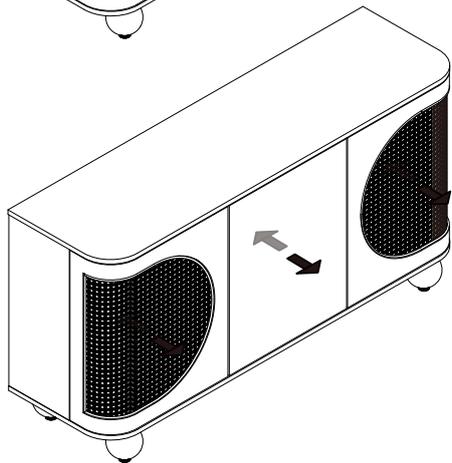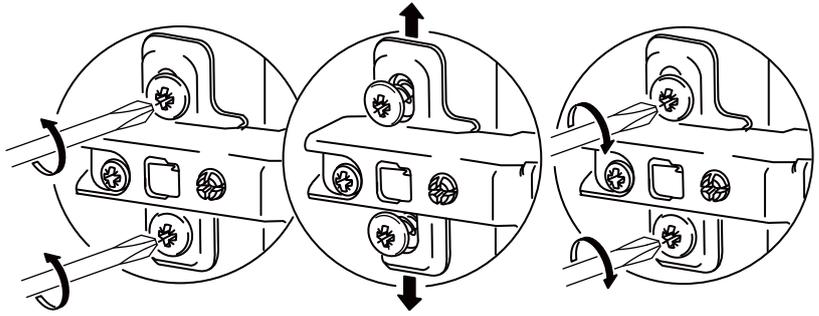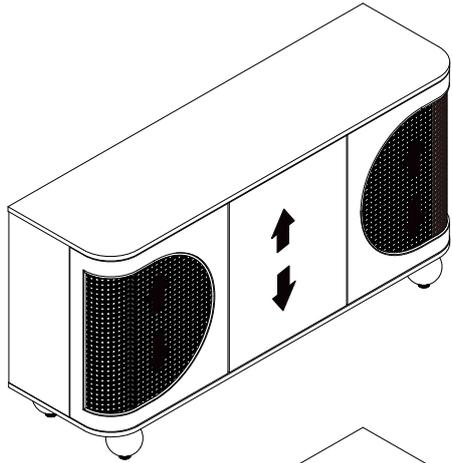



If you find that the door panel is skewed and the door collides with other panels, please adjust the door panel immediately according to the steps in the above picture.

Una Large Sideboard, Oak/Walnut

CF_MC50760/NAT/WAL

STEP 19

 Qx2	 Sx1	
--	--	---

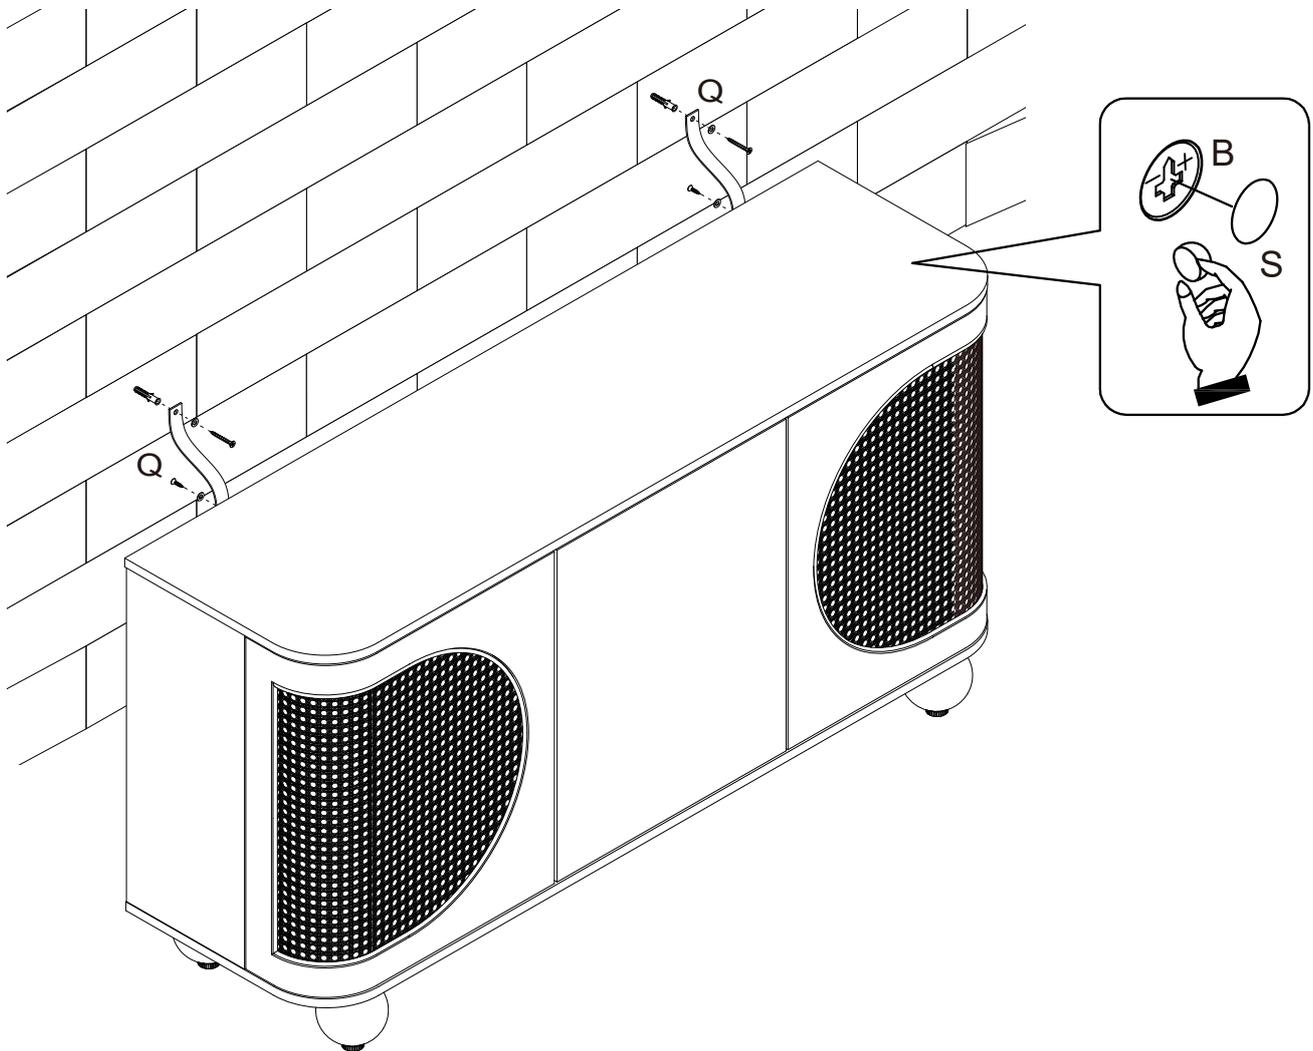

Assembled