






## GENERAL WARNINGS

### Odessa Garden Armchair Set

CF\_ MLM-211596

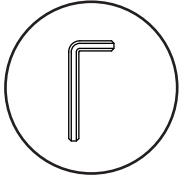

Please use the Allen key provided to avoid over tightening and possible screw damage.

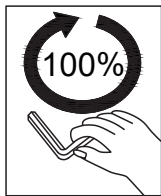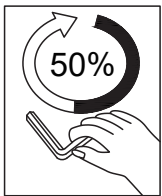

Before aligning all bolt holes, tighten the bolt to 50%. Only after completing all assembly step then fully tightened to 100%.



Minimum Two Persons Assembly




Approx Assembly Time 30minutes




# Odessa Garden Armchair Set

CF\_MLM-211596



## PRODUCT PARTS INCLUDED

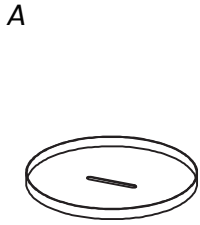



x2

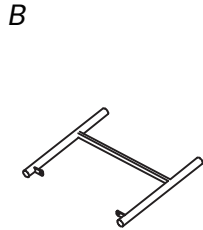



x2

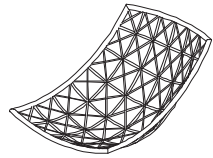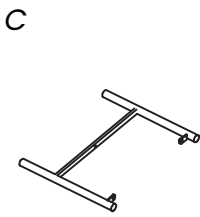

x2

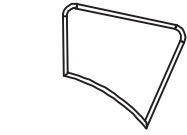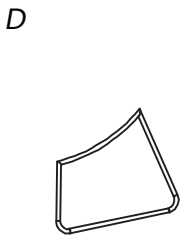


x2

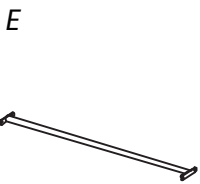


x1


x1

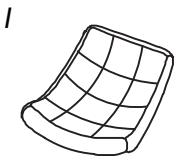


x1




SCREWS x20  
M6\*15mm



SCREWS x1  
M6\*30mm




SCREWS x8  
M6\*35mm




Tool x1


## STEP 1

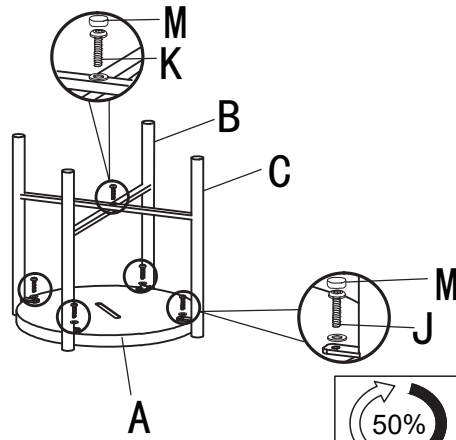


## STEP 2

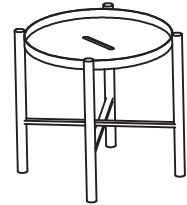

## STEP 3

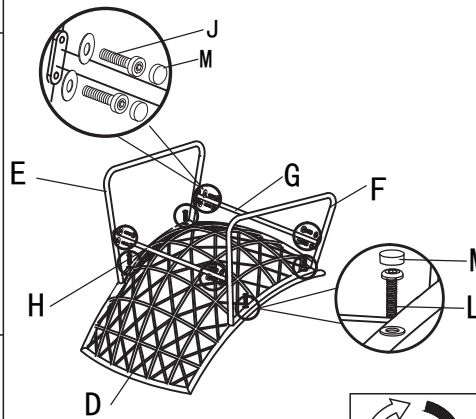

## STEP 4

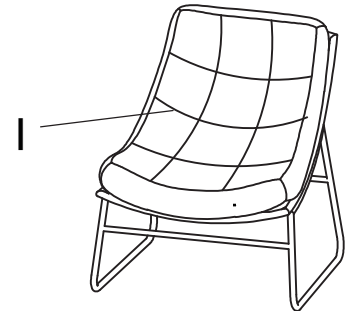

## STEP 5

