


cult

Thank you for your order

Get ready to assemble with ease + elevate your space with our easy to follow assembly instructions.

Should you require any additional help with your build, please contact our friendly + knowledgeable customer service team.


 +44 (0) 208 185 6960

 info@cultfurniture.com

 www.cultfurniture.com


Keston Arc Floor Lamp

CF_KEST-TRAV/NAT

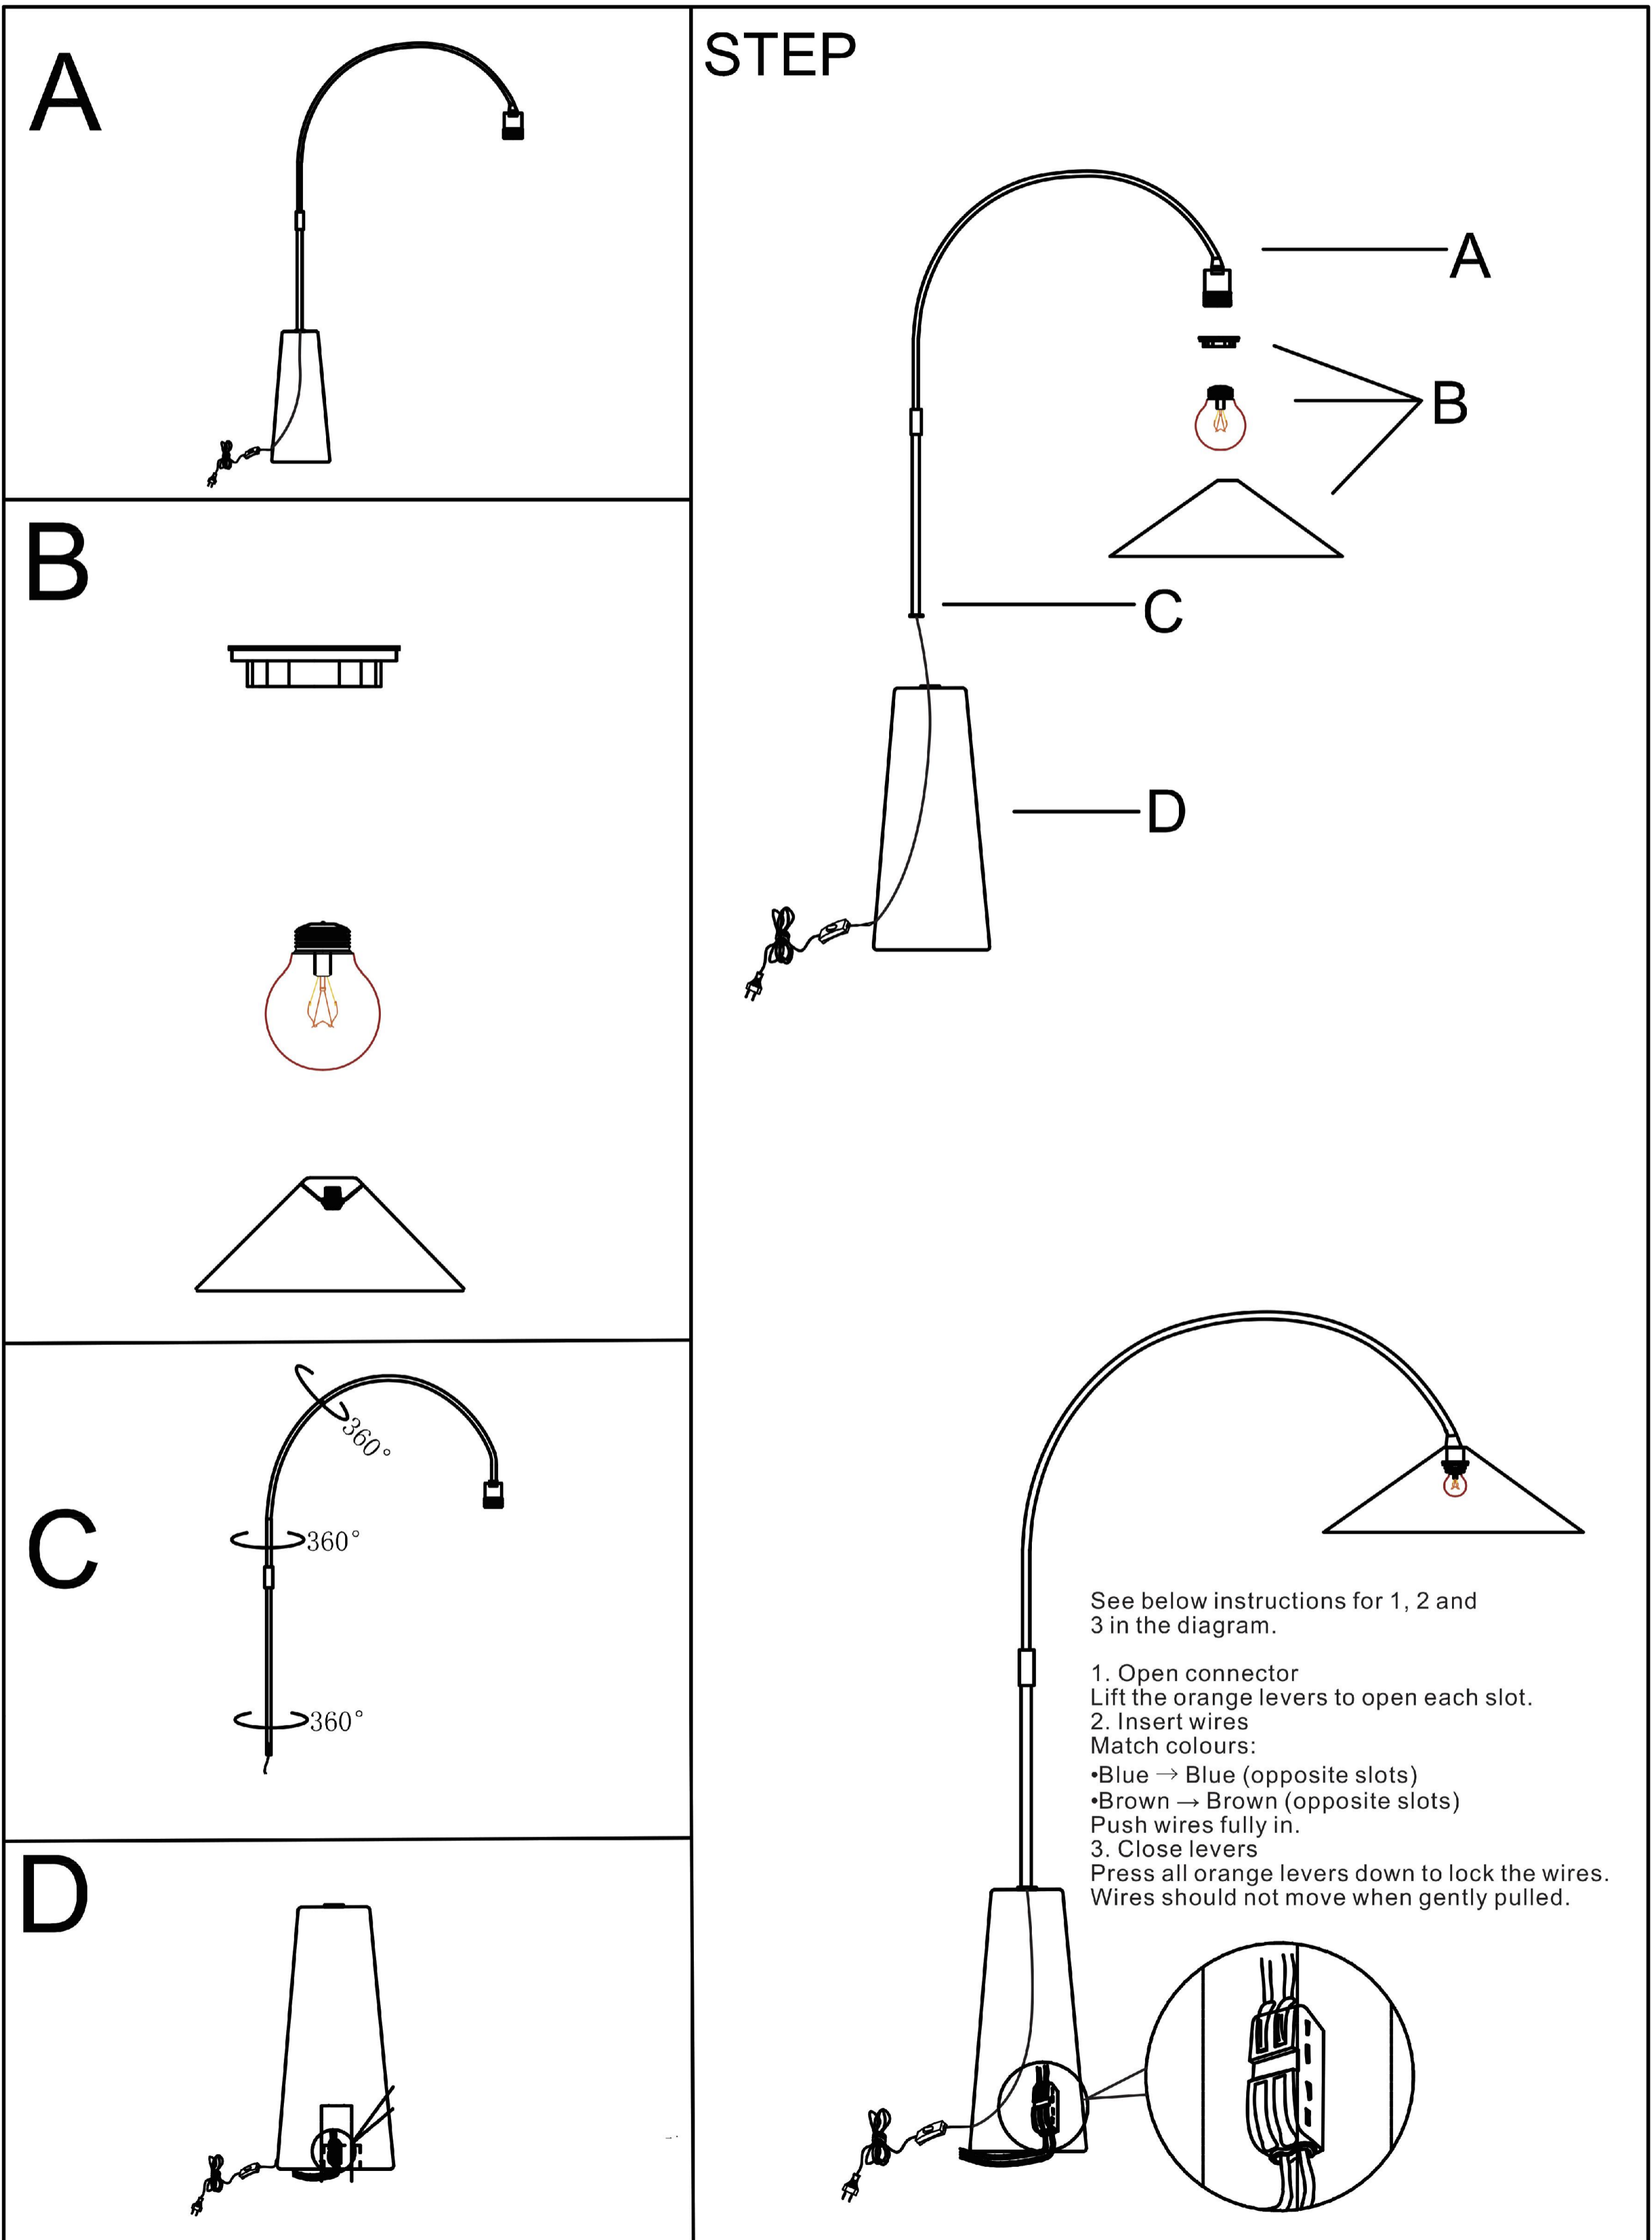


STEP


A

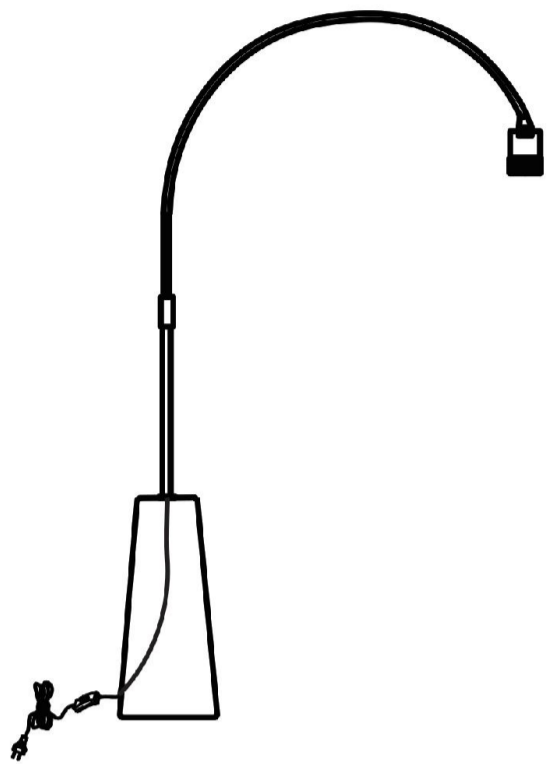



B

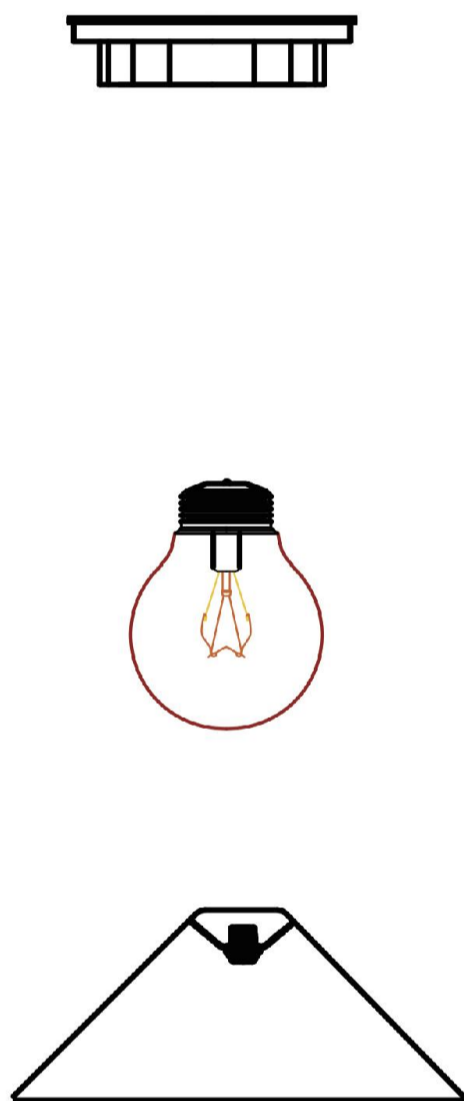

C

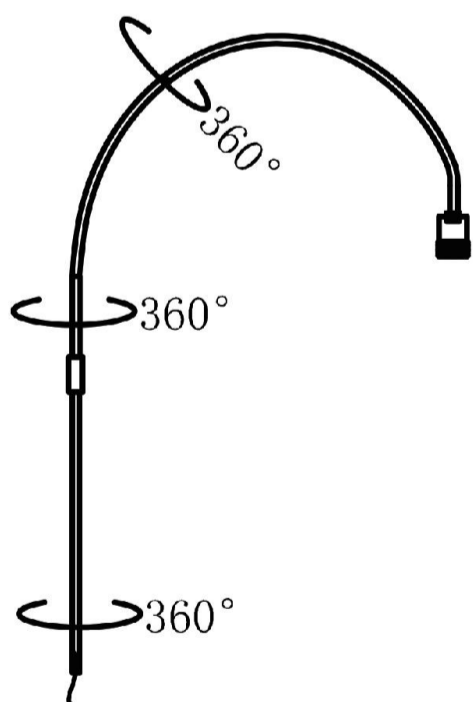

D

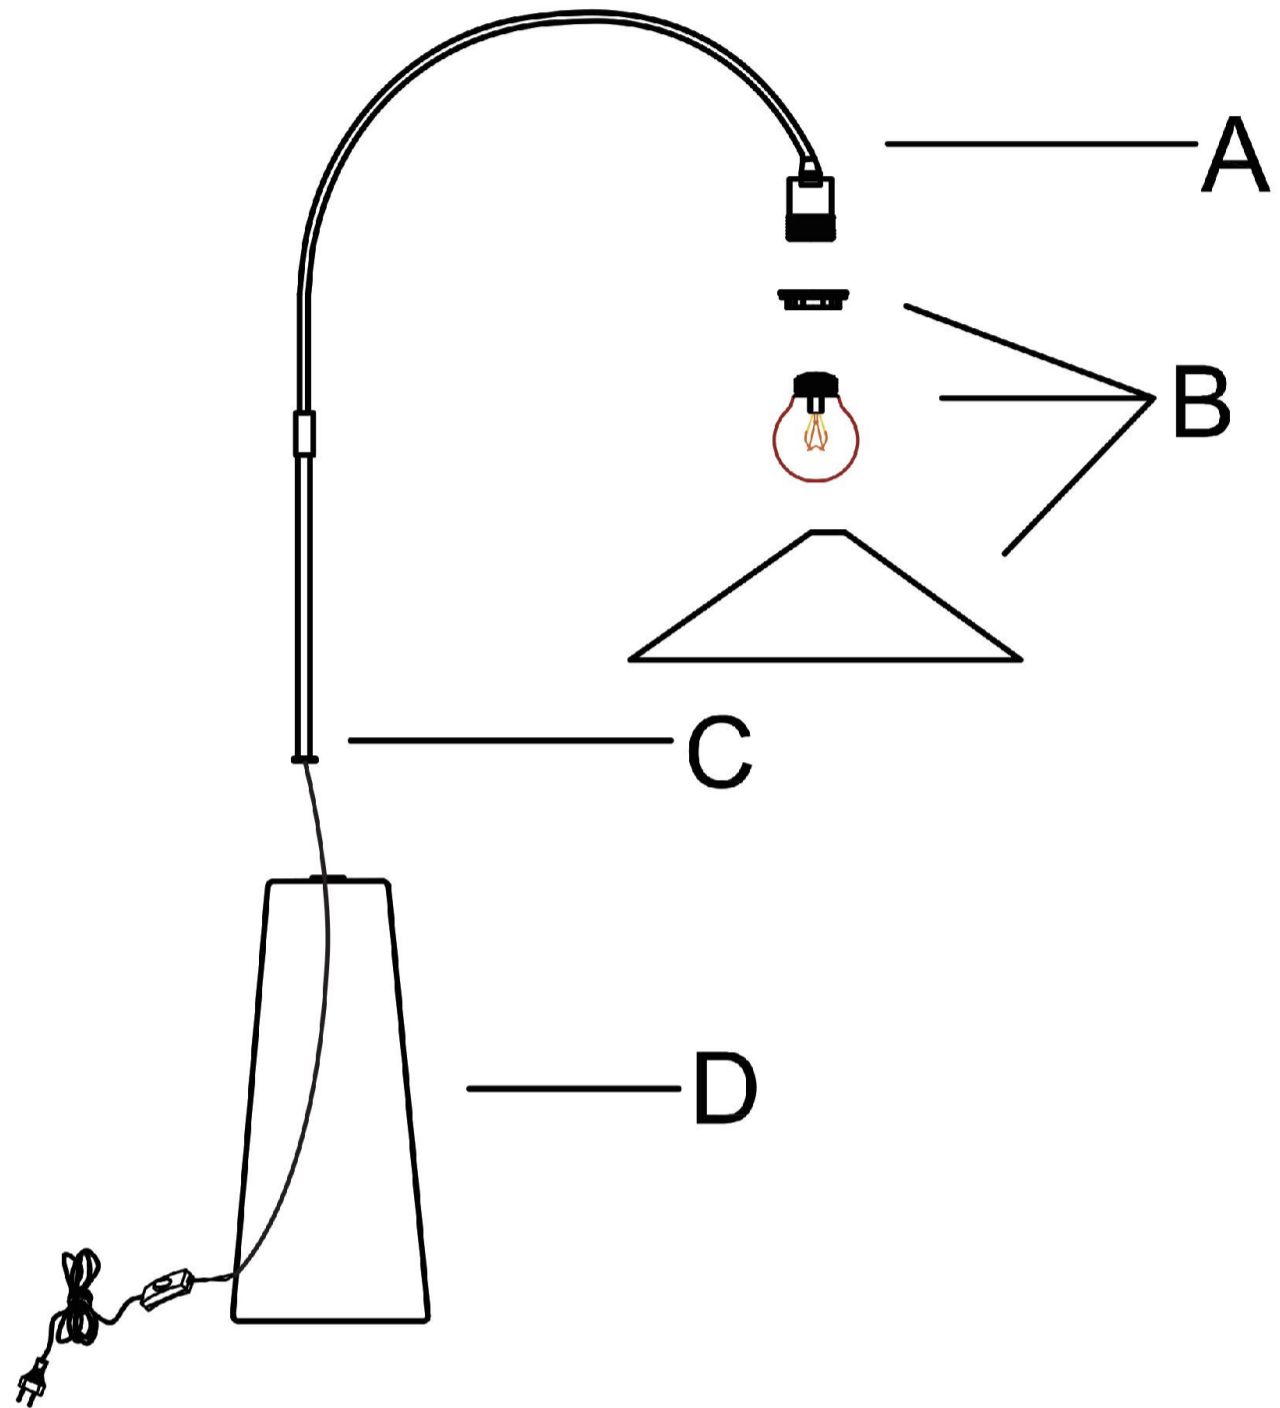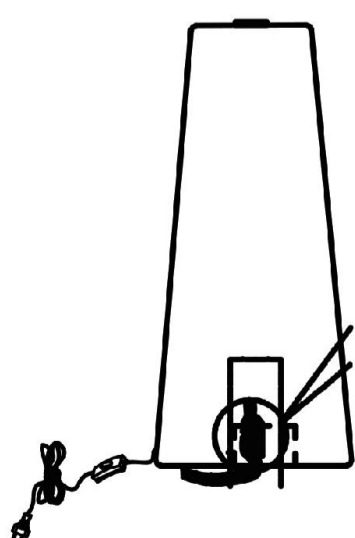

See below instructions for 1, 2 and 3 in the diagram.

1. Open connector
Lift the orange levers to open each slot.
2. Insert wires
Match colours:
•Blue → Blue (opposite slots)
•Brown → Brown (opposite slots)
Push wires fully in.
3. Close levers
Press all orange levers down to lock the wires.
Wires should not move when gently pulled.

